



THE KING OF SNOW®


# 926 Series Sno-Thro®

Owner/Operator Manual  
Manuel Du Propriétaire/Utilisateur

---

## Models

- 926037 – Pro 26
- 926038 – Pro 28
- 926039 – Pro 32
- 926040 – Pro 36
- 926041 – Pro-Track 26
- 926042 – Pro-Track 28
- 926043 – Pro-Track 32
- 926104 – Pro 32 12V
- 926105 – Pro 36 12V

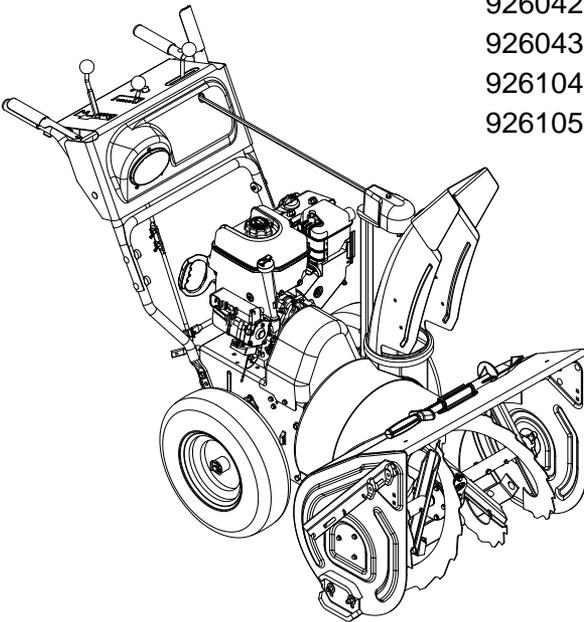

**GB** ENGLISH

**F** FRANÇAIS

# TABLE OF CONTENTS

SAFETY.....	4	STORAGE.....	33
ASSEMBLY.....	8	SERVICE PARTS.....	33
CONTROLS and FEATURES.....	12	ACCESSORIES.....	33
OPERATION.....	13	TROUBLESHOOTING.....	34
MAINTENANCE.....	20	SPECIFICATIONS.....	35
SERVICE AND ADJUSTMENTS.....	23	WARRANTY.....	38

## INTRODUCTION

### NON-ENGLISH MANUALS



Manuals in languages other than English may be obtained from your Dealer. Visit your dealer or [www.ariens.com](http://www.ariens.com) for a list of languages available for your equipment.



Manuals printed in languages other than English are also available as a free download on our website:

<http://www.ariens.com>

### MANUALES EN IDIOMAS DIFERENTES DEL INGLES



Puede obtener manuales en idiomas diferentes del inglés en su distribuidor. Visite a su distribuidor o vaya a [www.ariens.com](http://www.ariens.com) para obtener una lista de idiomas disponibles para su equipo.



También puede imprimir manuales en idiomas diferentes del inglés descargándolos gratuitamente de nuestra página Web:

<http://www.ariens.com>

### MANUELS NON ANGLAIS



Des manuels dans différentes langues sont disponibles chez votre revendeur. Rendez-vous chez votre revendeur ou allez sur le site [www.ariens.com](http://www.ariens.com) pour consulter la liste des langues disponibles pour votre équipement.



Les manuels imprimés dans des langues différentes de l'anglais sont également disponibles en téléchargement gratuit sur notre site Web :

<http://www.ariens.com>

### MANUALS

Before operation of unit, carefully and completely read your manuals. If used improperly, this unit could be dangerous and cause personal injury or property damage. The contents will provide you with safety instructions for the safe use of your unit during normal operation and maintenance.

All reference to left, right, front, or rear are given from operator standing in operation position and facing the direction of forward travel.


### ENGINE MANUAL

The engine on this unit is covered by a separate manual specific to the engine. This manual is included in the literature package that shipped with the unit. Refer to this manual for engine service recommendations. If the engine manual is not available, contact the engine manufacturer for a replacement manual.

### MODEL AND SERIAL NUMBERS

When ordering replacement parts or making service inquiries, know the Model and Serial numbers of your unit and engine.

Numbers are located on the product registration form in the unit literature package. They are printed on a serial number label, located on the frame of your unit.

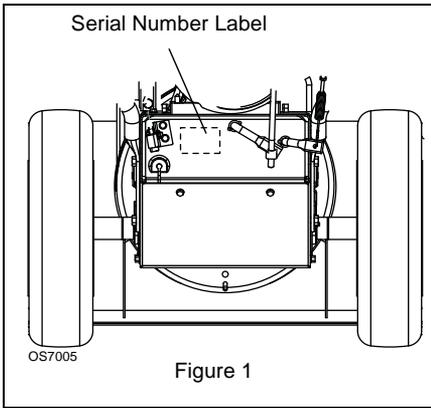

- Record Unit Model and Serial numbers here.

- Record Engine Model and Serial numbers here.

## PRODUCT REGISTRATION

The Ariens dealer must register the product at the time of purchase. Registering the product will help the company process warranty claims or contact you with the latest service information. All claims meeting requirements during the limited warranty period will be honored, whether or not the product registration card is returned. Keep a proof of purchase if you do not register your unit.

**Customer Note:** If the dealer does not register your product, please fill out, sign, and return the product registration card to Ariens or go to [www.ariens.com](http://www.ariens.com).

## UNAUTHORIZED REPLACEMENT PARTS

Use only Ariens replacement parts. The replacement of any part on this vehicle with anything other than an Ariens authorized replacement part may adversely affect the performance, durability, or safety of this unit and may void the warranty. Ariens disclaims liability for any claims or damages, whether warranty, property damage, personal injury or death arising out of the use of unauthorized replacement parts. To locate your nearest Ariens Dealer, go to [www.ariens.com](http://www.ariens.com) on the internet.

## DISCLAIMER

Ariens reserves the right to discontinue, make changes to, and add improvements upon its products at any time without public notice or obligation. The descriptions and specifications contained in this manual were in effect at printing. Equipment described within this manual may be optional. Some illustrations may not be applicable to your unit.

## DELIVERY

**Customer Note:** If you have purchased this product without complete assembly and instruction by your retailer, it is your responsibility to:

1. Read and understand all assembly instructions in this manual. If you do not understand or have difficulty following the instructions, contact your nearest Ariens Dealer for assistance. Make sure all assembly has been properly completed.

**NOTE:** To locate your nearest Ariens Dealer, go to [www.ariens.com](http://www.ariens.com) on the Internet.



**WARNING:** Improper assembly or adjustments can cause serious injury.

2. Understand all Safety Precautions provided in the manuals.
3. Review control functions and operation of the unit. Do not operate the Sno-Thru unless all controls function as described in this manual.
4. Review recommended lubrication, maintenance and adjustments.
5. Review Limited Warranty Policy.
6. Fill out a Product Registration Card and return the card to the Ariens Company or go to [www.ariens.com](http://www.ariens.com).

# SAFETY



**WARNING:** To avoid injury to hands and feet, always disengage clutches, shut off engine, and wait for all movement to stop before unclogging or working on snow thrower.

Hand contact with the rotating impeller is the most common cause of injury associated with snow throwers. Never use your hand to clean out the discharge chute.

Keep hands and feet away from auger and impeller.

## SAFETY ALERTS



Look for these symbols to point out important safety precautions. They mean:

**Attention!**



**Personal Safety Is Involved!**

**Become Alert!**

**Obey The Message!**

The safety alert symbols above and signal words below are used on decals and in this manual. Read and understand all safety messages.



**DANGER: IMMINENTLY HAZARDOUS SITUATION!** If not avoided, WILL RESULT in death or serious injury.



**WARNING: POTENTIALLY HAZARDOUS SITUATION!** If not avoided, COULD RESULT in death or serious injury.



**CAUTION: POTENTIALLY HAZARDOUS SITUATION!** If not avoided, MAY RESULT in minor or moderate injury. It may also be used to alert against unsafe practices.

## NOTATIONS

**NOTE:** General reference information for proper operation and maintenance practices.

**IMPORTANT:** Specific procedures or information required to prevent damage to unit or attachment.

## PRACTICES AND LAWS

Practice usual and customary safe working precautions, for the benefit of yourself and others. Understand and follow all safety messages. Be alert to unsafe conditions and the possibility of minor, moderate, or serious injury or death. Learn applicable rules and laws in your area. Always follow the practices set forth in this manual.

## REQUIRED OPERATOR TRAINING

Original purchaser of this unit was instructed by the seller on safe and proper operation. If unit is to be used by someone other than original purchaser; loaned, rented or sold, ALWAYS provide this manual and any needed safety training before operation.

## SAFETY DECALS AND LOCATIONS

ALWAYS replace missing or damaged Safety Decals. Refer to Figure 2 below for Safety Decal locations.

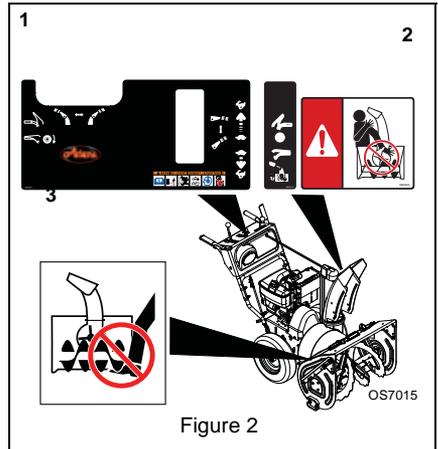


Figure 2

## 1. WARNING!



OL1801

Read Owner/Operator Manual.



OL4370

Keep people away from unit while operating. Keep children out of work area and under watchful care of a responsible adult.



OL0910

Never direct discharge towards persons or property that may be injured or damaged by thrown objects.



OL4010

Stop engine, remove key, read manual before making any repairs or adjustments.



OL4690

Wear appropriate hearing protection.



ONLY use clean-out tool to clear blockages. NEVER use your hands.

## 2. DANGER!



OS6610

**ROTATING PARTS!** ONLY use clean-out tool to clear blockages. NEVER use your hands. **High speed impeller rotates below discharge opening. Wait for all moving parts to stop before removing clogs or servicing.**

## 3. DANGER!



OS2080

### ROTATING PARTS.

Keep clear of auger while engine is running.

- Read Operator's Manual.
- Allow operation only by properly trained adult, never children.
- Stop engine and remove ignition key prior to leaving the operator's position for any reason.
- Keep all controls, guards and safety devices properly serviced and functional.
- Never direct discharge towards persons or property that may be injured or damaged by thrown objects.

## EMISSION CONTROL SYSTEM

This equipment and/or its engine may include exhaust and evaporative emissions control system components required to meet U.S. Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB) regulations. Tampering with emission controls and components by unauthorized personnel may result in severe fines or penalties. Emission controls and components can only be adjusted by an Ariens Company dealer or an authorized engine manufacturer's service center. Contact your Ariens Company Equipment Retailer concerning emission controls and component questions.

## SAFETY RULES

Read, understand, and follow all safety practices in Owner/Operator Manual before beginning assembly or operating. Failure to follow instructions could result in personal injury and/or damage to unit.

ALWAYS remove key and/or wire from spark plug before assembly, maintenance or service. Unintentional engine start up can cause death or serious injury.

Complete a walk around inspection of unit and work area to understand:

- Work area
- Your unit
- All safety decals

ALWAYS check overhead and side clearances carefully before operation. ALWAYS be aware of traffic when operating along streets or curbs.

Keep children and people away. Keep children out of work area and under watchful care of a responsible adult.

NEVER allow children to operate or play on or near unit. Be alert and shut off unit if children enter area.

DO NOT allow adults to operate unit without proper training. Only trained adults may operate unit. Training includes actual operation.

Keep area of operation clear of all toys, pets, and debris. Thrown objects can cause injury.

Check for weak spots on docks, ramps or floors. Avoid uneven work areas and rough terrain. Stay alert for hidden hazards.

DO NOT operate near drop-offs, ditches, or embankments. Unit can suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.

Falling snow, fog, etc. can reduce vision and cause an accident. Operate unit only when there is good visibility and light.

NEVER operate unit after or during the use of medication, drugs or alcohol. Safe operation requires your complete and unimpaired attention at all times.

NEVER allow anyone to operate this unit when their alertness or coordination is impaired.

DO NOT operate unit without wearing adequate winter outer garments. Wear adequate safety gear, including safety glasses with side shields, and protective gloves. Wear proper footwear to improve footing on slippery surfaces.

DO NOT wear loose clothing or jewelry and tie back hair that may get caught in rotating parts.

Protect eyes, face and head from objects that may be thrown from unit. Wear appropriate hearing protection.

Avoid sharp edges. Sharp edges can cut. Moving parts can cut off fingers or a hand.

ALWAYS keep hands and feet away from all rotating parts during operation. Rotating parts can cut off body parts.

NEVER place your hands or any part of your body or clothing inside or near any moving part while unit is running.

ALWAYS keep hands away from all pinch points.

DO NOT touch unit parts which might be hot from operation. Allow parts to cool before attempting to maintain, adjust or service.

Never direct discharge towards persons or property that may be injured or damaged by thrown objects. Use extreme caution on gravel surfaces. Stay alert for hidden hazards or traffic. Adjust Skid Shoes so Scraper Blade does not contact gravel.

DO NOT throw snow any higher than necessary.

Deflected materials can cause injury and property damage.

Always stand clear of the discharge area when operating this unit.

Fumes from engine exhaust can cause injury or death. DO NOT run engine in an enclosed area. Always provide good ventilation.

ALWAYS disengage attachment, stop unit and engine, remove key and allow moving parts to stop before leaving operator's position.

**ROTATING AUGER CAN CAUSE SERIOUS INJURY. NEVER ATTEMPT TO UNCLOG OR CLEAN UNIT WHILE ENGINE IS RUNNING.**

Read, understand, and follow all instructions in the manual and on the machine before starting.

Understand:

- How to operate all controls.
- The functions of all controls.
- How to STOP in an emergency.

Before starting engine, disengage control(s).

Use only approved extension cords and receptacles when starting units equipped with electric starter. DO NOT connect electric starter cord to any wiring system that is not a three-wire grounded system.

ALWAYS allow unit and engine to adjust to outdoor temperatures before clearing snow.

DO NOT overload the machine capacity by attempting to operate or to clear snow at too fast a rate.

Slow down and turn corners slowly.

Do not operate in reverse unless absolutely necessary. ALWAYS back up slowly. Always look down and behind before and while backing.

Disengage attachment drive when traveling from one work area to another.

Abnormal Vibrations are a warning of trouble.

Striking a foreign object can damage unit.

Immediately stop unit and engine. Remove key and wait for all moving parts to stop.

Remove wire from spark plug. Inspect unit and make any necessary repairs before restart.

Before cleaning, removing clogs or making any inspections, repairs, etc.: disengage clutch(es), stop unit and engine, remove key, allow moving parts to stop. Allow hot parts to cool.

Run unit a few minutes after clearing snow to prevent freeze-up of attachment.

Disengage attachment when not in use.

Disengage all clutches before starting engine.

Adjust skid shoes to clear gravel or crushed rock surfaces safely.

Never leave a running unit unattended.

ALWAYS shut off engine before leaving unit. ALWAYS remove key to prevent unauthorized use.

Never carry passengers.

Check clutch and brake operation frequently. Adjust and service as required. All motion of drive wheels and auger/impeller must stop quickly when control levers are released.

DO NOT operate on steep slopes. DO NOT clear snow across the face of slopes. Keep all movement on slopes slow and gradual. DO NOT make sudden changes in speed or direction. Use a slow speed to avoid stops or shifts on slopes. Avoid starting or stopping on a slope.

DO NOT park unit on a slope unless absolutely necessary. When parking on a slope always block the wheels.

ALWAYS shut off engine, remove key, and close fuel shut-off valve or drain fuel when transporting unit on a truck or trailer.

Use extra care when loading or unloading unit onto trailer or truck.

Secure unit chassis to transport vehicle. NEVER secure from rods or linkages that could be damaged.

DO NOT transport machine while engine is running.

Keep unit free of ice or other debris. Clean up oil or fuel spills.

This product is equipped with an internal combustion type engine. DO NOT use unit on or near any unimproved, forest-covered or brush covered land unless exhaust system is equipped with a spark arrester meeting applicable local, state or federal laws. A spark arrester, if it is used, must be maintained in effective working order by operator.

Fuel is highly flammable and its vapors are explosive. Handle with care. Use only an approved gasoline container with an appropriately sized dispensing spout.

NO smoking, NO sparks, NO flames. ALWAYS allow engine to cool before servicing.

NEVER fill fuel tank when engine is running or hot from operation.

NEVER fill or drain fuel tank indoors.

Replace fuel cap securely and clean up spilled fuel.

Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.

When practical, remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle.

Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.

If fuel is spilled on clothing, change clothing immediately.

Avoid Electric Shock. Objects contacting both battery terminals at the same time may result in injury and unit damage. DO NOT reverse battery connections.

Explosive Gases from battery can cause death or serious injury. Poisonous battery fluid contains sulfuric acid and its contact with skin, eyes or clothing can cause severe chemical burns.

No flames, No sparks, No smoking near battery.

ALWAYS wear safety glasses and protective gear near battery.

DO NOT TIP battery beyond a 45° angle in any direction.

ALWAYS keep batteries out of reach of children.

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Follow First Aid directions for contact with battery fluid.

- External Contact: Flush with water.
- Eyes: Flush with water for at least 15 minutes and get medical attention immediately!
- Internal Contact: Drink large quantities of water. Follow with Milk of Magnesia, beaten egg or vegetable oil. Get medical attention immediately!
- In case of internal contact, DO NOT induce vomiting!

Before tipping unit up onto housing, remove fuel so no spills will occur and remove battery. Ensure unit is secure and will not tip over during maintenance.

ALWAYS keep protective structures, guards, and panels in good repair, in place and securely fastened. NEVER modify or remove safety devices.

DO NOT change engine governor settings or over-speed engine.

Fumes from engine exhaust can cause injury or death. DO NOT run engine in an enclosed area. Always provide good ventilation.

ALWAYS maintain unit in safe operating condition. Damaged or worn out muffler can cause fire or explosion.

Keep all hardware properly tightened. Check shear bolts frequently.

Maintain or replace safety and instruction labels, as necessary.

NEVER store unit with fuel in fuel tank, inside a building where any ignition sources are present such as hot water heaters, space heaters, or clothes dryers. Allow the engine to cool before storing in any enclosure. Shut off fuel and allow engine to cool completely before storing in closed area or covering unit.


For extended storage, clean unit thoroughly. See Engine Manual for proper storage. Use only attachments or accessories designed for your unit. Check components frequently. If worn or damaged, replace with manufacturer's recommended parts.

# ASSEMBLY

**WARNING:** AVOID INJURY. Read and understand the entire *Safety* section before proceeding.

**WARNING:** Dropping or tipping over boxed unit could result in personal injury or damage to unit.

## PACKAGE CONTENTS

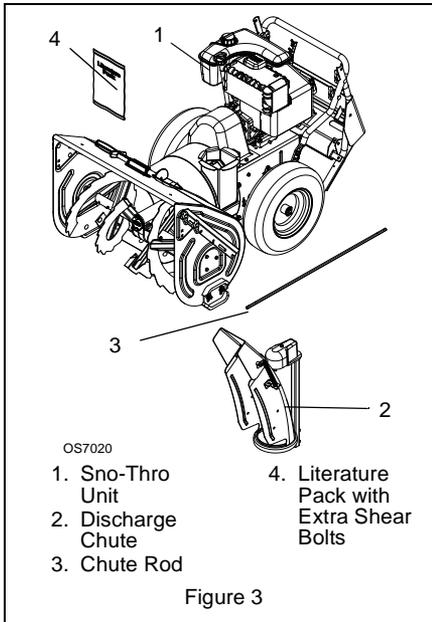

## ASSEMBLY

### Tools Required:

- Pliers
- Open-End Wrenches: 3/8, 7/16, 1/2, 9/16 in. and/or Adjustable Wrench
- Tire Gauge

## Unfold Handlebar


(Figure 4)

1. Remove the lower and loosen the upper hardware on the handlebar assembly.
2. Loosen the hardware on the shift rod.
3. Put the speed selector lever in the second reverse position.
4. Rotate the handlebars into operating position.

**IMPORTANT:** Be careful not to damage cable spring hooks when rotating handlebars upward.

5. Install and tighten all hardware on the handlebar assembly and shift rod.

**NOTE:** The handlebar has two height positions. Adjust the handlebar height to provide better operator comfort. See *Handlebar Height* on page 24.

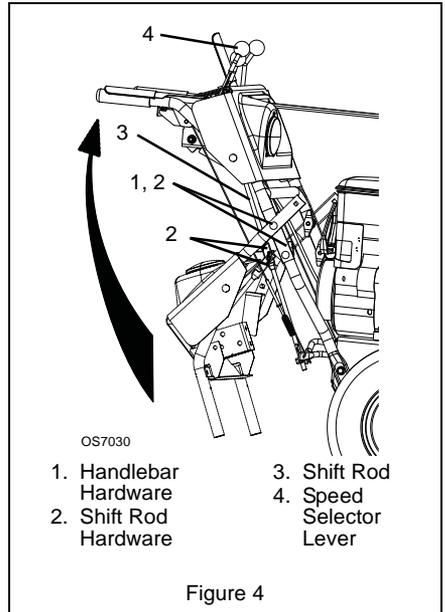


## Install Discharge Chute and Discharge Chute Rod

(Figure 5, 6, 7 and 8)

1. Grease underside of discharge chute ring (if not already greased).
2. Remove mounting hardware from auger housing.
3. Install discharge chute over opening in the auger housing. Finger tighten the mounting hardware removed in step 2.

**NOTE:** Leave discharge chute pedestal loose to help install the chute rod and connect it to the control assembly.

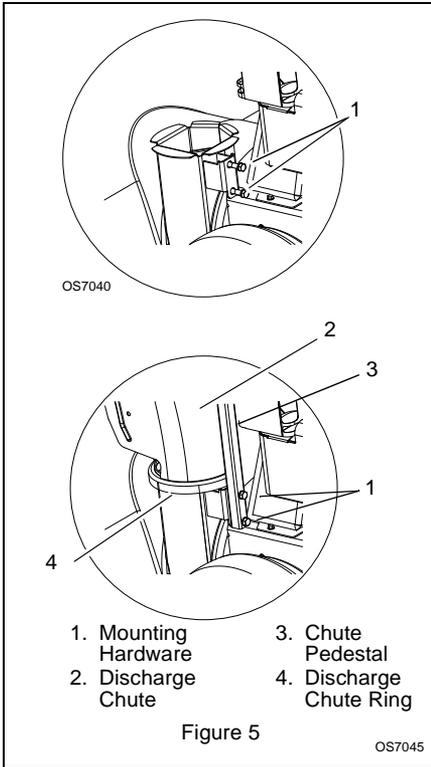

4. Remove the cover from the gear assembly on the discharge chute.
5. Release the lock teeth on the gear assembly with your finger and rotate the discharge chute 90° left.
6. Remove and save the hairpin from the control assembly underneath the control panel.

**NOTE:** Do not remove the pin installed on the chute rod.



**NOTE:** To ensure the discharge chute follows its full range of travel, make sure the control lever is pushed all the way to the left before installing and pinning the chute rod.

7. Align the holes on the end of the chute rod with the mark on the gear assembly and slide the end without a pin through the gear assembly, through the hook on the chute lock cable and into the hex hole in the control assembly.

**IMPORTANT:** The hook will prevent the control cable from contacting the engine or muffler guard.

**NOTE:** After the chute rod has been inserted through the hex hole in the control assembly, placing the unit in the service position (see *Service Position* on page 20) will ease alignment and installation of the hair pin.

8. Secure the chute rod to the control assembly with the hair pin removed in step 6 using the end hole location as shown in Figure 7. Insert the hair pin with the loop end to the left of the chute rod so the control assembly follows a full range of travel.

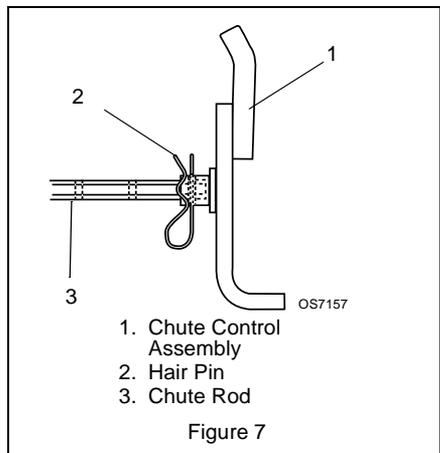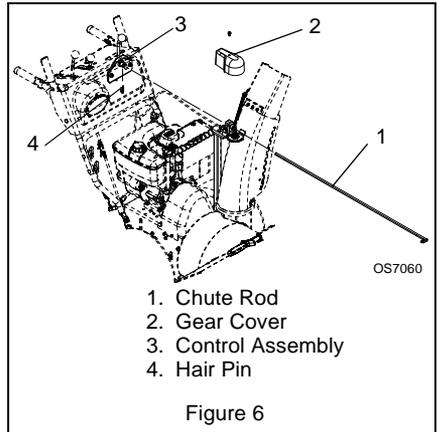

9. Connect the chute lock cable to the lock arm by fitting the cable ball end into the slot on the lock arm and then insert the chute lock cable fitting into the bracket on the chute pedestal (Figure 8).
10. Adjust and tighten jam nuts on cable to remove cable slack. Be sure not to pretension lock arm so it retracts from the gear teeth see *Discharge Chute Control* on page 25.

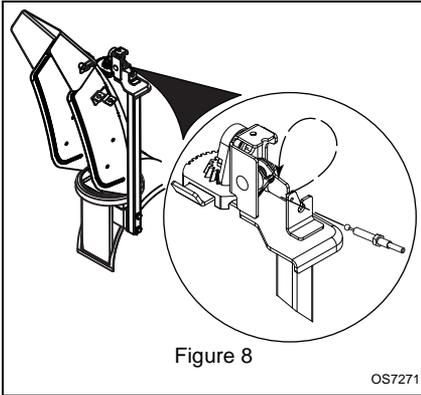


Figure 8

OS7271

11. Replace the gear cover removed in step 4.
12. Orient the chute and pedestal to its most vertical position and tighten pedestal hardware to 15 – 31 lbf-ft (20 – 42 N•m).
13. Make sure the discharge chute rotates left and right when you push the discharge chute control lever left and right.

**NOTE:** If chute does not stay in position, adjust as directed in *Discharge Chute Control* on page 25, or repair before operation.


## Remote Deflector Control

(Figure 9)

Connect the cable end to the cable anchor on the discharge deflector before clipping the cable to the cable bracket on the discharge chute.

1. Route deflector remote cable along the left side of the chute pedestal.
2. Insert the barrel on the cable end into the bracket on left side of chute deflector (Figure 9).
3. Hold seal out of the way while routing the cable through the bracket on the left side of the discharge chute, and then push the cable fitting into the bracket.
4. Push the seal securely over the end of the cable fitting to prevent water from entering the cable.

Check deflector travel. Adjust nut on cable end under handlebar to obtain full travel, if necessary (see *Remote Deflector Control* on page 25).

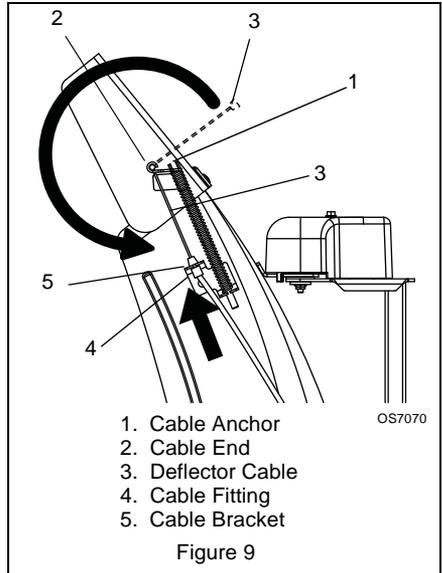

1. Cable Anchor
2. Cable End
3. Deflector Cable
4. Cable Fitting
5. Cable Bracket

Figure 9

OS7070

## Connect Battery (926104, 105)

1. Remove wing nuts from battery cover.
2. Install wire lead to battery terminal.
3. Install battery cover and tighten wing nuts.

## Check Function of Dual Handle Interlock

Without the engine running, press down (engage) both clutch levers. Release attachment clutch lever. Attachment clutch should remain engaged until traction clutch lever is released, then both clutches *must* disengage. If they do not, contact your Dealer for repairs.

## Check Tire Pressure (926037, 038, 039, 040, 104, 105)

Check tire pressure and adjust to the pressure listed on tire sidewall.



**CAUTION:** Avoid injury! Explosive separation of tire and rim parts is possible when they are serviced incorrectly:

- Do not attempt to mount a tire without the proper equipment and experience to perform the job.
- Do not inflate the tires above the recommended pressure.
- Do not weld or heat a wheel and tire assembly. Heat can cause an increase in air pressure resulting in an explosion. Welding can structurally weaken or deform the wheel.
- Do not stand in front or over the tire assembly when inflating. Use a clip-on chuck and extension hose long enough to allow you to stand to one side.

## Check Track Tension (926041, 042, 043)

Check tracking of unit with the differential locked, and tension of tracks (see *Track Tension Adjustment* on page 32).

## Check Auger Gearcase Oil

Check oil level in auger gearcase (see *Check Auger Gearcase* on page 21).

## Check Engine Crankcase Oil

**IMPORTANT:** The engine is shipped with 5W-30 oil in crankcase. Refer to Engine Manual for detailed instructions.

## Fill Engine Fuel Tank

See *Filling Fuel Tank* on page 17.

## Check Function of all Controls

Ensure unit runs and performs properly. Refer to *OPERATION* on page 13.

## Run-in Attachment Belt

1. Start unit in a well-ventilated area according to *Starting and Shut Off* on page 18.
2. Engage attachment clutch lever and run attachment for about 15 minutes.
3. Stop unit, wait for all moving parts to stop, and remove spark plug wire.
4. Adjust belt finger, if necessary. See *Check Belt Finger Clearance* on page 28.
5. Adjust clutch idler according to *Attachment Clutch/Brake Adjustment* on page 26.

# CONTROLS AND FEATURES

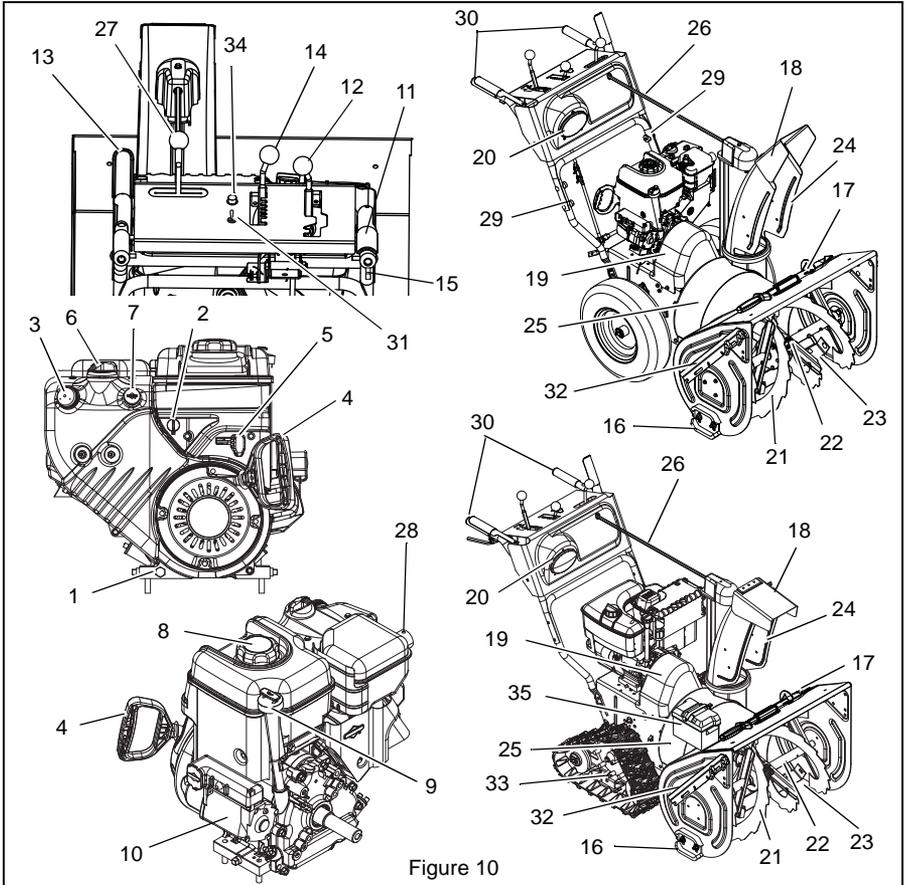


Figure 10

- |   |  |
|---|--|
| 1. Oil Drain                                      | 19. Belt Cover                                 |
| 2. Fuel Shut-Off Valve                            | 20. Headlight                                  |
| 3. Primer Bulb                                    | 21. Auger                                      |
| 4. Recoil Starter Handle                          | 22. Auger Gearcase                             |
| 5. Throttle (Engine Stop)                         | 23. Scraper Blade                              |
| 6. Choke Control Knob                             | 24. Discharge Chute                            |
| 7. Ignition Key (Push/Pull)                       | 25. Impeller                                   |
| 8. Fuel Tank and Cap                              | 26. Chute Rod                                  |
| 9. Oil Fill/Dipstick                              | 27. Chute Control                              |
| 10. Electric Starter                              | 28. Muffler Guard                              |
| 11. Attachment Clutch Lever                       | 29. Handlebar Hardware                         |
| 12. Speed Selector                                | 30. Heated Handles                             |
| 13. Traction Drive Clutch Lever                   | 31. Heated Handle Switch                       |
| 14. Deflector Remote Control                      | 32. Drift Cutters                              |
| 15. Height Adjuster Trigger<br>(926041, 042, 043) | 33. Differential Lock Knob                     |
| 16. Runner  | 34. Electric Start 12V Key Start (926104, 105) |
| 17. Clean-Out Tool                                | 35. Battery (926104, 105)                      |
| 18. Remote Discharge Chute Deflector              |  |

# OPERATION



**WARNING:** AVOID INJURY. Read and understand the entire *Safety* section before proceeding.



**WARNING:** To avoid injury to hands and feet, always disengage clutches, shut off engine, and wait for all movement to stop before unclogging or working on snow thrower.

Keep hands and feet away from auger and impeller.


## CONTROLS AND FEATURES

See *CONTROLS and FEATURES* on page 12 for all Controls and Features locations.

### Dual Handle Interlock

When Attachment Clutch and then Traction Drive Clutch are engaged, the Attachment Clutch will remain engaged (lever down) if released. To stop attachment, release Traction Drive Clutch and both clutches will disengage.

### Traction Drive Clutch - Left Hand Lever

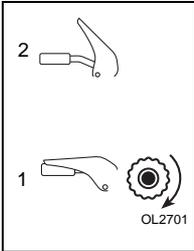


Squeeze the Traction Drive Clutch Lever against the Handlebar (1) to engage wheel drive for propelling unit. Forward speed will vary according to snow depth and moisture content.

Release lever (2) to stop movement.

**NOTE:** When traveling to or from the area to

be cleared, press down on the handlebars enough to raise the front of the unit slightly off the surface. Engage the traction drive clutch without engaging the attachment drive clutch.

### Attachment Clutch - Right Hand Lever

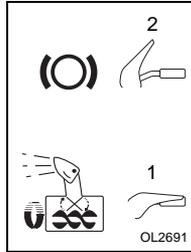

Squeeze Attachment Clutch Lever against handlebar (1) to engage attachment. Release both clutch levers (2) to disengage power and apply brake to attachment.

**IMPORTANT:** If the belt squeals when the attachment clutch lever is engaged, the impeller may be frozen

in the auger housing. Immediately release the attachment clutch lever and move the unit into a heated area to thaw.


**NOTE:** If belt squeals when impeller turns freely, see *Attachment Clutch/Brake Adjustment* on page 26.

### Ignition Switch (926037, 038, 039, 040, 041, 042, 043)



Operate the ignition switch with the removable key. To start the engine, turn the key to Start. To stop the engine, turn the key to Off.


### Ignition Switch (12V start on dash panel) (926104, 105)

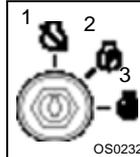

The ignition switch is operated by a removable key. It has three positions:

1. Stop
2. Run
3. Start


### Primer Bulb

 

Pushing the primer bulb in adds fuel for easier engine start. Refer to *Starting and Shut Off* on page 18.

## Speed Selector

Position the Speed Selector in the appropriate speed notch to control forward and reverse travel.

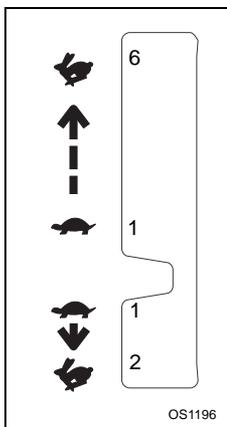

Forward:

(6) Fastest

(1) Slowest

Reverse:

(1) Slow

(2) Fast

**IMPORTANT: DO NOT** change motion from forward to reverse with clutch engaged. Forward speed can be changed without declutching.

## Snow Clean-Out Tool

(Figure 11)



**WARNING:** Hand contact with the rotating impeller is the most common cause of injury associated with snow throwers. Never use your hand to clean out the discharge chute.


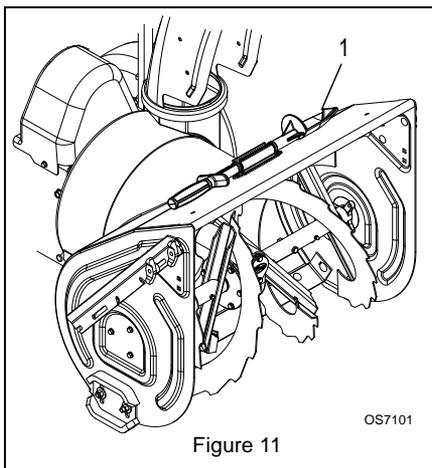


Figure 11

## Choke Control Knob

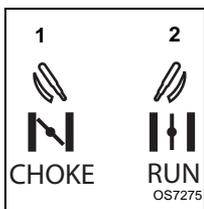


1. Choke Closed position: chokes off air to engine for easier start.

2. Choke Open position: allows for normal operation.

**IMPORTANT:** Gradually open choke after engine starts.

## Throttle

 

The throttle controls the engine speed. To increase or decrease the engine speed, adjust to:

1. Fast (normal or warm starts)
2. Part-Throttle
3. Slow (cold weather starts)
4. Stop (engine is off) (Not on 12V models)

## Electric Starter

The electric starter will start a properly choked and cranked engine when the key is turned (12V) or starter button (120V) is pushed. Refer to *Starting and Shut Off* on page 18.

## Recoil Starter Handle

When pulled, handle will turn engine over.

**IMPORTANT:** DO NOT let handle snap back against starter.

To clear the discharge chute:

1. Shut off the engine.
2. Wait 10 seconds and make sure impeller blades have stopped rotating.
3. Remove the snow clean-out tool (1) from the auger housing and use it to remove the clog from the discharge chute.
4. Replace the snow clean-out tool on the auger housing.

## Remote Deflector Control

Place deflector into position before operation. DO NOT throw snow any higher than necessary.

Place deflector remote in a forward notch to throw snow lower. Place deflector remote in a rearward notch to throw snow higher.

## Discharge Chute

Discharge chute rotates 200°.

ALWAYS position discharge chute in safe direction and angle, away from operator and bystanders, before starting engine.

## Discharge Chute Control

(Figure 12)

**IMPORTANT:** If chute does not stay in set position, adjust as directed in *Discharge Chute Control* on page 25, or repair before operation.

Rotate the Chute with Discharge Chute Control (Figure 12).

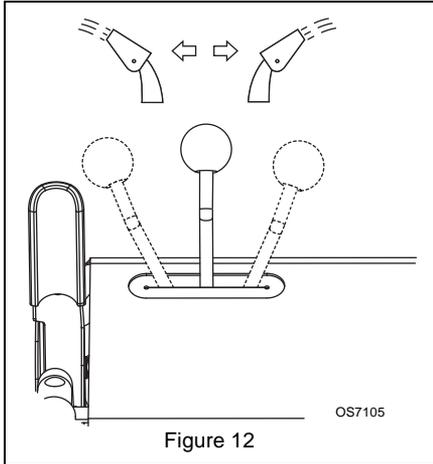


Figure 12

**IMPORTANT:** DO NOT force frozen chute controls. If frozen, take to warm place until controls are free.

## Differential Lock (926041, 042, 043)

(Figure 13)

The differential can be locked for maximum traction or unlocked to allow for easier turning. The differential lock knob is located on the right Track Assembly. With the differential locked power is applied equally to both tracks.

To engage the differential lock:

Pull and turn knob to LOCKED (1) position and release (knob will snap in place when positioned correctly).

To release the differential lock:

Pull and turn knob to the UNLOCKED (2) position and release (knob will be positioned out slightly from unit when positioned correctly).


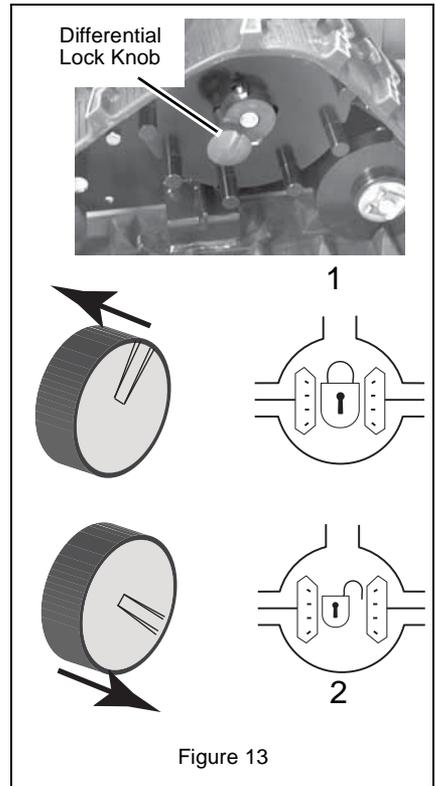


Figure 13

## Heated Handles

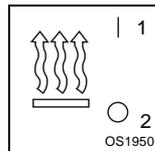

Turn the heated handles switch to the ON (1) position to activate. Turn the switch to the OFF (2) position to deactivate.

## Scraper Blade

The scraper blade allows better contact with the surface being cleared. It also prevents damage to the housing from normal usage.

**IMPORTANT:** DO NOT allow Scraper Blade to wear too far or Auger/Impeller housing will become damaged.


## Skid Shoes

The skid shoes control the distance between the scraper blade and the ground. Adjust skid shoes equally to keep blade level with the ground. Refer to *Pre-Start* on page 17 for recommended settings.

## Drift Cutters

(Figure 14)

Drift cutters break up snow drifts that are taller than the auger housing and direct the snow into the auger. Store the drift cutters on the auger housing when not in use. Install them as shown below so they are taller than the snow to be cleared.

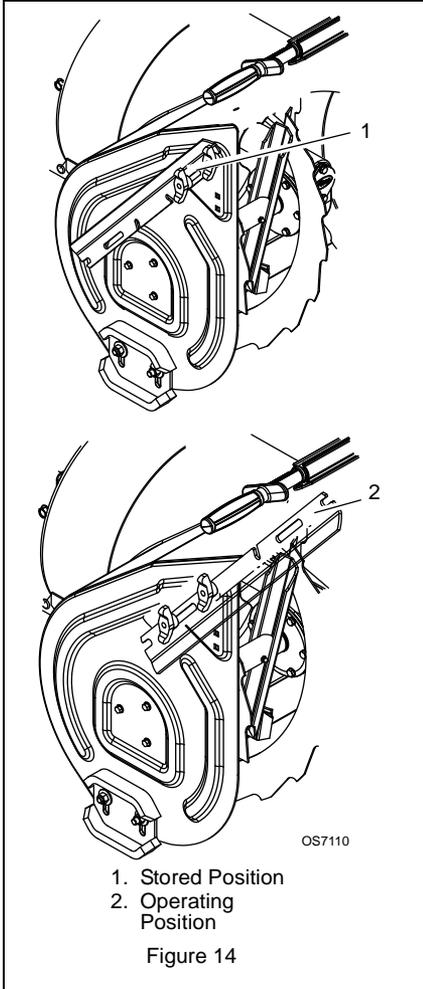

## Track Angle


(926041, 042, 043)

(Figure 15)

The track angle can be adjusted to position the auger housing for level clearing, deep cutting or transport.

Squeeze the handlebar trigger and press down on the handlebars to move the auger housing into an up position. Release the trigger to hold the position.

Lift up on the handlebars and squeeze and release the handlebar trigger to move the auger housing into a down position.

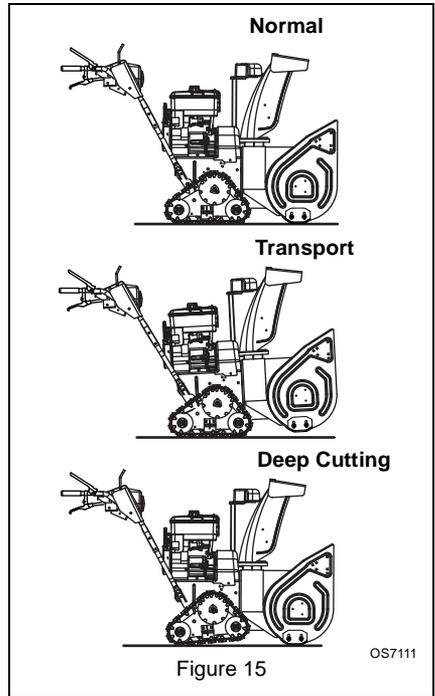

## FILLING FUEL TANK



**WARNING:** AVOID INJURY. Read and understand the entire *Safety* section before proceeding.

## GASOLINE

**IMPORTANT:** ALWAYS use gasoline that meets the following guidelines:

- Clean, fresh gasoline.
- A minimum of 87 octane/87 AKI (91 RON). High altitude use may require a different octane. Consult your engine manual.
- Gasoline with up to 10% ethanol (gasohol) or up to 10% MTBE (methyl tertiary butyl ether) is acceptable.
- Use of any gasoline other than those approved above will void the engine warranty. If the pumps are not marked for the content of alcohol or ethers, check ethanol and MTBE levels with the fuel supplier.
- Do not modify the fuel system to use different fuels.
- Never mix oil and gasoline.


**NOTE:** All gasoline is not the same. If the engine experiences starting or performance problems after using a new gasoline, switch to a different fuel provider or fuel brand.

**IMPORTANT:** Excessively oxygenated or reformulated fuels (fuels blended with alcohols or ethers) can damage the fuel system or cause performance problems. If any undesirable operating problems occur, use a gasoline with a lower percentage of alcohol or ether.

### Fuel Stabilizer

Gasoline left in the fuel system for extended periods without a stabilizer will deteriorate, resulting in gum deposits in the system. These deposits can damage the carburetor and the fuel hoses, filter and tank. Prevent deposits from forming in the fuel system during storage by adding a quality fuel stabilizer to the fuel. Follow the recommended mix ratio found on the fuel stabilizer container.

## Fuel Shut-Off Valve

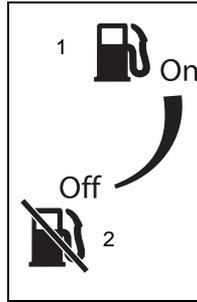

**IMPORTANT:** The fuel shut-off valve **MUST** be in the closed position prior to transporting the unit.

The fuel shut-off valve has two positions:

Open (1): Use this position to run the unit.  
Closed (2): Use this position to service, transport, or store the unit.

### To add fuel to fuel tank:

1. ALWAYS place unit in open or well-ventilated area.
2. Stop engine and allow to cool.
3. Clean Fuel Cap and surrounding area to prevent dirt from entering Fuel Tank.
4. Remove Cap.

**IMPORTANT:** Refer to Engine Manual for proper fuel type and tank capacity.

5. Replace Fuel Cap and tighten.
6. ALWAYS clean up any spilled fuel.

## PRE-START

### 1. Frozen Impeller

**IMPORTANT:** Before starting engine, check impeller to be sure it is not frozen.

To check impeller:

1. With ignition key switch in "Stop" position, squeeze Attachment Clutch Lever to Engaged position.
2. Pull Recoil Starter Handle.
3. If impeller is frozen, (cannot pull Starter Handle) move unit to a heated area and thaw to prevent possible damage.

### 2. Check Function of Clutches

If clutches do not engage or disengage properly, adjust or repair before operation. See *Attachment Clutch/Brake Adjustment* on page 26 and *Traction Drive Clutch Adjustment* on page 29.

### 3. Check Dual Handle Interlock

Without the engine running, press down (engage) both clutch levers. Release attachment clutch lever. Attachment clutch should remain engaged until traction clutch lever is released, then both clutches *must* disengage.

If clutches do not engage or disengage properly, adjust or repair before operation (see *Attachment Clutch/Brake Adjustment* on page 26 and *Traction Drive Clutch Adjustment* on page 29).

#### 4. Check Axle Lock (926041, 042, 043)

Use the axle lock knob to lock or unlock the right side differential. Lock the differential to engage both tracks and increase traction; unlock the right side to allow for easier turning of the unit (see *Differential Lock* on page 15).

#### 5. Check Skid Shoes

Check and adjust Skid Shoes (See *Skid Shoes* on page 23). Allow 1/8 in. (3 mm) between scraper blade and hard, smooth surface(s). Allow 1 in. (25 mm) between scraper blade and uneven or gravel surfaces.

#### 6. Check Engine Fuel & Crankcase Oil



**WARNING:** AVOID INJURY. Read and understand the entire *Safety* section before proceeding.

Check and add fuel if required. Check that the engine crankcase oil is full using dipstick. Refer to Engine Manual for detailed instructions.

#### TO STOP IN AN EMERGENCY

Immediately release both control levers to stop unit in an emergency. Stop engine, remove key and wait for all rotating parts to stop before leaving operator's position.

#### STARTING AND SHUT OFF



**WARNING:** FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit. DO NOT attempt to start your unit at this time. Read entire Owner/Operator Manual and the Engine Manual first.

**IMPORTANT:** Allow unit and engine to adjust to the outdoor temperature before clearing snow. Before shut-off, run the attachment a few minutes to prevent impeller freeze-up.

**NOTE:** Try out each control without the engine running to see how it works and what it does.

#### Manual Start

1. Turn discharge chute straight ahead.
2. Make sure that the traction clutch and attachment drive clutch levers are fully disengaged.
3. Push Primer Bulb 2 or 3 times for cold engine.

**NOTE:** When temperature is below -15° F (-26° C) additional priming may be needed.

4. If engine is cold, apply choke. See Engine Manual for detailed instructions.

**NOTE:** A warm engine requires less choking than a cold engine.

5. Set throttle to proper starting position.
6. Insert key into ignition switch and turn to "Run" position.
7. Grasp starter handle and pull rope out slowly until it pulls harder. Let rope rewind slowly.
8. Pull rope with a rapid continuous full arm stroke. Let rope rewind slowly.

**IMPORTANT:** DO NOT let Starter Handle snap against Starter.

9. Repeat steps 7 and 8 until engine starts. (If engine does not start, refer to *TROUBLESHOOTING* on page 34.)
10. Adjust choke as needed.
11. Set throttle to Part Throttle or Slow position for adaptation to outside temperature or travel. Set throttle to Fast position for normal operation.

#### Electric Start (120V)

#### (926037, 038, 039, 040, 041, 042, 043)

1. Connect extension cord to starter.

**IMPORTANT:** Prevent damage to unit. Know voltage of your starter and only use matching outlets.

2. Plug extension cord into 120V 3-wire, grounded outlet.

**IMPORTANT:** Use only Ariens extension cord (P/N 02483100) or an equivalent cord that is rated for a minimum of 13 amps, grounded, UL listed, CSA certified and labeled as suitable for outdoor use.

3. Turn discharge chute straight ahead.
4. Make sure that the traction clutch and attachment drive clutch levers are fully disengaged.
5. Push Primer Bulb 2 or 3 times for cold engine.

**NOTE:** When temperature is below -15° F (-26° C) additional priming may be needed.

6. Insert key into ignition switch on engine and turn to "Run" position.
7. If engine is cold, apply choke. A warm engine requires less choking than a cold engine. See Engine Manual for detailed instructions.
8. Set throttle to proper starting position.
9. Press starter button on engine until engine starts.

**IMPORTANT:** DO NOT operate starter more than 15 seconds per minute, as overheating and damage can occur. (If engine does not start, refer to *TROUBLESHOOTING* on page 34.)

10. Adjust choke as needed.
11. Disconnect power cord from outlet, then starter.

12. Set throttle to Part Throttle or Slow position for adaptation to outside temperature or travel. Set throttle to Fast position for normal operation.

### Electric Start (12V) (926104, 105)

1. Turn discharge chute straight ahead.
2. Make sure that the traction clutch and attachment drive clutch levers are fully disengaged.
3. Push Primer Bulb 2 or 3 times for cold engine.

**NOTE:** When temperature is below -26° C additional priming may be needed.

4. If engine is cold, apply choke. See Engine Manual for detailed instructions.

**NOTE:** A warm engine requires less choking than a cold engine.

5. Set throttle to proper starting position.
6. Turn ignition key to the START position until engine starts and release into the RUN position.

**IMPORTANT:** DO NOT operate starter more than 15 seconds per minute, as overheating and damage can occur. If engine will not start, see *TROUBLESHOOTING* on page 34 or refer to Engine Manual.

7. Adjust choke as needed.
8. Set throttle to Part Throttle or Slow position for travel or adaptation to outside temperature. Once achieved, set throttle to Fast position for normal operation.

### Shut Off

1. Release Traction Drive Clutch Lever and allow unit to come to a complete stop.
2. Run Impeller a few minutes after use to prevent freeze-up of Impeller.
3. Release Attachment Clutch Lever and wait for all moving parts to come to a complete stop.
4. Move Throttle to the "Stop" position.
5. Turn off engine shut-off switch ("OFF").
6. Remove key.

### SNOW REMOVAL

**IMPORTANT:** Allow unit and engine to adjust to the outdoor temperature before clearing snow.

**NOTE:** Attachment clutch should be engaged before wheel drive clutch when throwing snow.

1. Select Speed Control position and direction.
2. Engage Attachment Clutch - Right Hand Lever.
3. Engage Traction Drive Clutch - Left Hand Lever.

**IMPORTANT:** DO NOT overload unit capacity by attempting to clear snow at too fast a rate. Use slow speed to clear deep or hard packed snow.

### Tips for Operation

Snow is best removed as soon as possible after snow fall.

To clear an area, run unit in an overlapping series of paths. For large areas, start in the middle and throw snow to each side, so snow is not cleared more than once.

ALWAYS direct snow away from area to be cleared and with direction of the wind.

### TRAVELING

To travel from one work area to another:

1. Set Throttle to Slow or Part-Throttle position.
2. **926037, 038, 039, 040, 104, 105:** Press down on handlebars enough to raise front of unit slightly off surface.  
**926041, 042, 043:** Place the unit in the transport position (see *Track Angle* on page 16).
3. Engage wheel or track drive clutch without engaging attachment drive clutch.

### TRANSPORT

ALWAYS shut off engine, remove key, and close fuel shut-off valve when transporting unit on a truck or trailer.

Use extra care when loading or unloading unit onto trailer or truck.

Secure unit chassis to transport vehicle. NEVER secure from rods or linkages that could be damaged.

DO NOT transport machine while engine is running.

# MAINTENANCE

Ariens Dealers will provide any service or adjustments which may be required to keep your unit operating at peak efficiency. Should engine service be required, contact an Ariens dealer or an authorized engine manufacturer's service center.



**WARNING: AVOID INJURY.** Read and understand the entire *Safety* section before proceeding.

## SERVICE POSITION


(Figure 16)



**WARNING:** Before tipping unit up onto housing, remove fuel so no spills will occur and remove battery (if equipped). Ensure unit is secure and will not tip over during maintenance.

1. Shut off engine, remove key, disconnect spark plug wire and allow unit to cool completely.
2. Close fuel shut-off valve (see *Gasoline* on page 17).
3. Drain fuel tank and fuel system (see Engine Manual for complete instructions).
4. Place unit on a flat level surface. Tip unit forward onto front of auger housing for service.

**IMPORTANT:** Ensure unit is secure and will not tip over. Strap and clamp onto bench if needed.

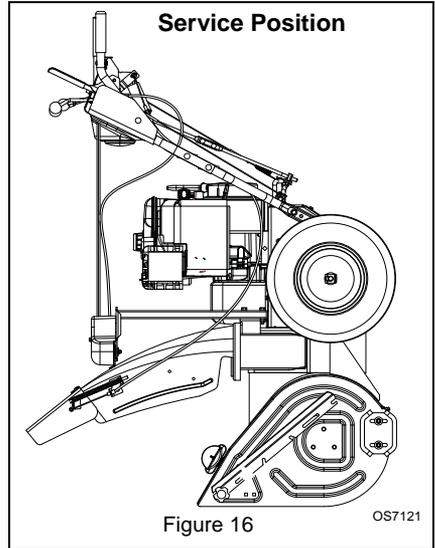

## MAINTENANCE SCHEDULE

The chart below shows the recommended maintenance schedule that should be performed on a regular basis. More frequent service may be required.

MAINTENANCE SCHEDULE				
Service Performed	Each Use	Every 5 hrs.	Every 25 hrs.	Yearly
Check Dual Handle Interlock	•			
Check Fasteners	•			
Check Clutch Operation	•			
Check Clutch Spring Adjustments		*	•	
Clean Engine	•			
Check Engine Oil	•	•		
Change Engine Oil		**	**	•
Check Tire Pressure			•	
Check Auger Gearcase			•	•
General Lubrication			•	•
Battery Maintenance			•	•

\* After first five hours of operation.

\*\* After first two hours of operation, thereafter every 25 hours.

### CHECK DUAL HANDLE INTERLOCK

Without the engine running, press down (engage) both clutch levers. Release attachment clutch lever. Attachment clutch should remain engaged until traction clutch lever is released, then both clutches *must* disengage.

### CHECK FASTENERS

Make sure all hardware is tightened properly.

## CHECK CLUTCH OPERATION

Auger / impeller must stop within 5 seconds when attachment clutch/impeller brake lever is released.

Wheels must stop quickly when traction drive clutch lever is released.

If clutches do not engage or disengage properly, adjust or repair before operation. See *Attachment Clutch/Brake Adjustment* on page 26 and *Traction Drive Clutch Adjustment* on page 29.

### CHECK CLUTCH SPRING ADJUSTMENT

Make sure the attachment clutch and traction drive clutch are adjusted to the range specified in *Attachment Clutch/Brake Adjustment* on page 26 and *Traction Drive Clutch Adjustment* on page 29.

### CLEAN ENGINE

Refer to Engine Manual for detailed instructions.

### CHECK ENGINE OIL

The engine crankcase oil should be checked every 5 hours of operation. Oil level **MUST** be maintained in safe operating range on dipstick at all times or engine damage will result (See Engine Manual).

Park unit on a level surface. Refer to Engine Manual for detailed instructions.

### CHANGE ENGINE OIL

Change oil after first 2 hours of operation, thereafter change oil every 25 hours (more often if required). Refer to Engine Manual for detailed instructions.

Run engine just prior to changing oil. Warm oil will flow more freely and carry away more contamination. Remove the oil drain plug from the rear of the unit and tip the unit back to help drain all the oil.

### CHECK TIRE PRESSURE

**(926037, 038, 039, 040, 104, 105)**

Keep tires at pressure listed on the tire sidewall. See *Check Tire Pressure* on page 11.

### CHECK AUGER GEARCASE

(Figure 17)

**IMPORTANT:** Proper oil level must be maintained.


Gear cases are filled to the correct level at the factory. Unless there is evidence of leakage, no additional lubricant should be required. Check oil level each season or every 25 hours of operation.

To ensure adequate lubricant level:

1. Remove filler plug. Lubricant must be at least up to bottom of lubricant filler hole with unit resting on a level-surface.
2. Add lubricant if required. Allow oil to drain to level of plug and replace plug.

**IMPORTANT:** Use only Ariens L-3 synthetic severe duty gear lube (Part Number 00068800).

**NOTE:** Gearcase filler plug may require an application of Loc-Tite® 565 thread sealant with repeated servicing. If Loc-Tite® 565 is not available, use PTFE pipe sealing tape on the filler plug.

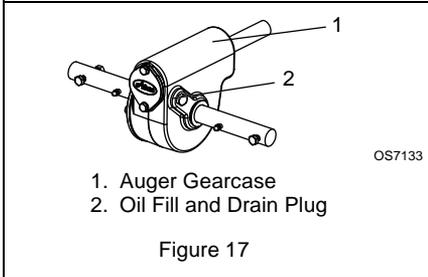

## GENERAL LUBRICATION

**IMPORTANT:** Wipe each fitting clean before and after lubrication. Do not wipe gearcase filler plug; wiping the gearcase filler plug may remove thread sealant and cause leaks.


**IMPORTANT:** DO NOT allow grease or oil to get on friction disc, friction plate or belts.

**NOTE:** Apply Ariens Hi-Temp Grease or equivalent to the lubrication fittings. See *SERVICE PARTS* on page 33.

Sno-Thro should be lubricated (Figure 18) at beginning of season or every 25 operating hours.

### Auger Shaft

**NOTE:** To grease auger shaft, remove shear bolt nuts, and shear bolts. Apply grease at the grease zerk and then turn the auger shaft. Replace shear bolts per instructions in *Shear Bolts* on page 24.

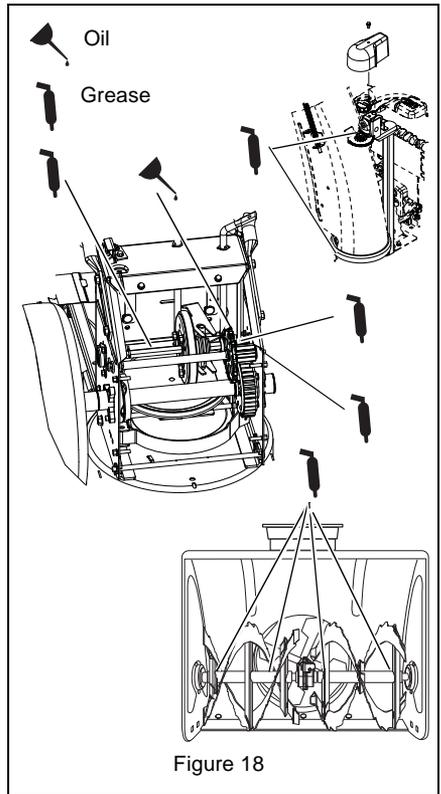

### Clean Battery (926104, 105)



**WARNING:** AVOID INJURY. Read and understand the entire *Safety* section before proceeding.

**IMPORTANT:** Battery is maintenance-free. Do not tamper with or attempt to open battery. See *SERVICE AND ADJUSTMENTS* on page 23 for charging procedures.

### Terminals

Keep battery and its terminals clean.


**IMPORTANT:** Remove battery from unit before cleaning.

Remove corrosion from battery terminals and cable connections with a wire brush, then wash with a weak baking soda solution.

After cleaning, apply a thin coat of grease or petroleum jelly to terminals and cable ends to retard corrosion.

## Replace Fuse (926104, 105)

1. Remove the two screws and the cover plate from beneath the battery.

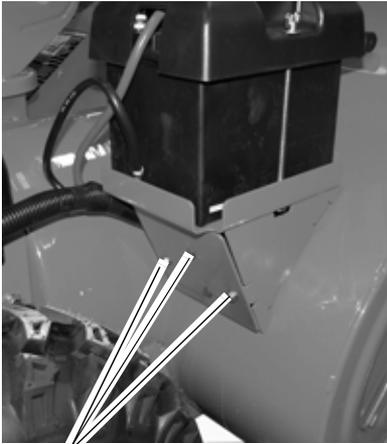

Cover plate and mounting screws.

OS7450

Figure 19

2. Locate the fuse holder on the wiring harness and remove the fuse.

3. Install a new fuse of the same amperating and type.



OS7455

Fuse and fuse holder.

Figure 20

4. Replace the cover plate and secure in position with the two screws removed in step 1.

**NOTE:** Make sure the wire harness does not get pinched between the cover plate and the auger housing.

## SERVICE AND ADJUSTMENTS



**WARNING: AVOID INJURY.** Read and understand the entire *Safety* section before proceeding.

### SCRAPER BLADE

**IMPORTANT:** Damage to auger/impeller housing will result if blade wears down too far.

Scraper blade is adjustable to compensate for wear.

To adjust scraper blade:

1. Tip unit back onto handlebar, support housing and loosen nuts retaining blade.
2. Adjust skid shoes to fully raised position (housing closest to ground).
3. Reposition scraper blade flush with skid shoes and tighten lock nuts.

### SKID SHOES


(Figure 21)

Skid Shoes should be adjusted as conditions require.

1. Position unit on a hard, flat, smooth level surface.

2. Adjust skid shoes by inserting a spacer of desired thickness under center of scraper blade, loosen skid shoe hardware, slide skid shoes to flat surface. Allow 1/8 in. (3 mm) between scraper blade and hard smooth surfaces. Allow 1 in. (25 mm) between scraper blade and uneven or gravel surfaces. Retighten hardware.

**NOTE:** Keep housing level by adjusting skid shoes equally.

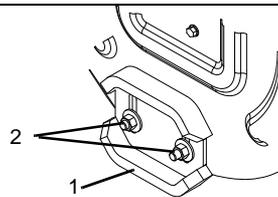

1. Skid Shoes
2. Skid Shoe Hardware

Figure 21


OS0483

## SHEAR BOLTS

(Figure 22)

**IMPORTANT:** Use only Ariens shear bolts for replacement. Use of any other type of shear bolt may result in severe damage to unit. See *SERVICE PARTS* on page 33.

Occasionally a foreign object may enter the auger/impeller housing and jam the auger, breaking shear bolts which secure the auger to the shaft. This allows auger to turn freely on the shaft which may help prevent damage to gear drive.

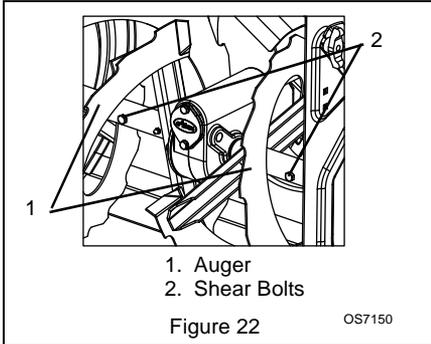


### For Replacement:

1. Align shear bolt holes in auger with shear bolt holes in the shaft.
2. Drive shear bolt through hole (if shear bolt was broken this will drive remaining part from shaft).
3. Secure shear bolt with nut.

**NOTE:** DO NOT overtighten the shear bolt. Tighten shear bolt to 5.8 – 12.2 lbf-ft (7.9 – 16.5 N•m).

## HANDLEBAR HEIGHT


(Figure 23 and 24)

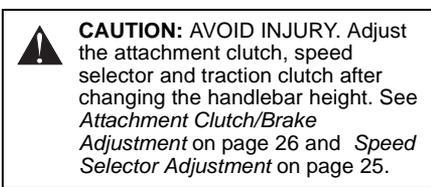

To raise or lower the handlebar:


1. Remove hair pin holding chute rod to control assembly.
2. Place unit in service position (see *Service Position* on page 20).
3. Remove bottom cover.
4. Remove top mounting bolts from the handlebars and adjust the handlebar up or down as needed until the handlebar mounting holes align with holes in unit frame.

5. Secure handlebar to frame with hardware removed in step 4 using the different hardware locations shown in Figure 23.

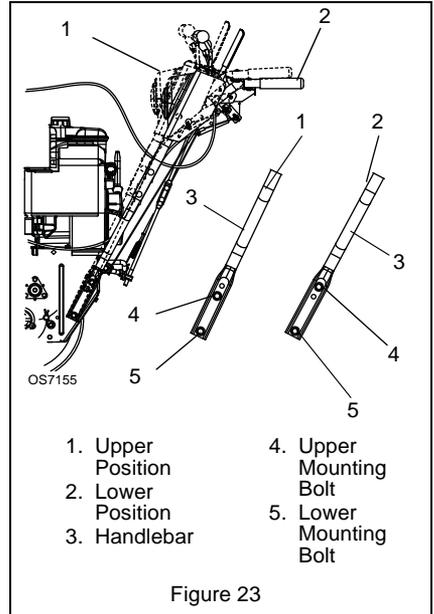

**NOTE:** Insert the hair pin with the loop end on the left side of the chute rod so the control lever will cover its full range of travel.

6. Align correct chute rod holes in chute control assembly as shown in Figure 24, and then secure chute rod in position with hair pin remove in step 1.

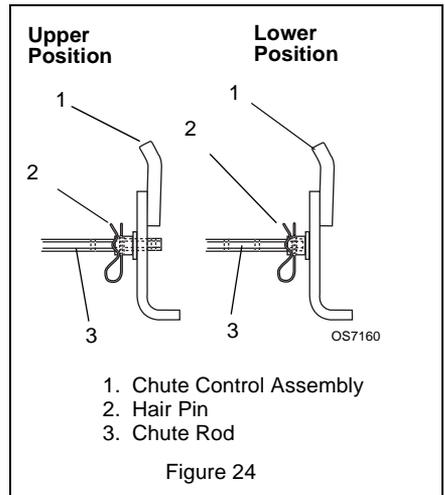

7. Check and adjust attachment clutch, speed selector and traction clutch. See *Speed Selector Adjustment* on page 25.
8. Re-install bottom cover.

## REMOTE DEFLECTOR CONTROL

(Figure 25)

Deflector must stay in selected position while throwing snow.

If deflector does not stay in set position:

1. Tighten nut beneath control panel to increase pressure on deflector control.

If deflector does not follow full range of travel:

1. Push deflector remote all the way forward.
2. Loosen adjusting nuts on cable support bracket underneath the dash panel (Figure 25).
3. To adjust the deflector lower:  
Slide cable down. Tighten bottom nut.
4. To adjust deflector higher:  
Slide cable up. Tighten top nut.
5. Check travel and repeat adjustment as necessary.

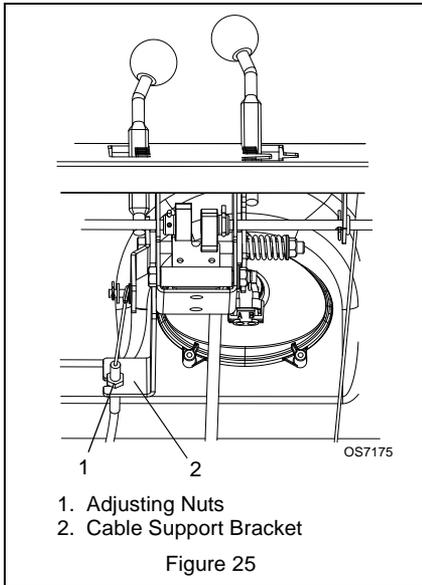


Figure 25

## DISCHARGE CHUTE CONTROL

(Figure 26)

If chute does not stay in position while throwing snow or if chute does not rotate freely, adjust the cable under the gear cover so the chute lock fingers engage or disengage the locking gear.

If chute does not stay in position:

Loosen the cable by loosening the rear adjustment nut, and then tightening the forward adjustment nut against the bracket until the lock arm engages the gear teeth.

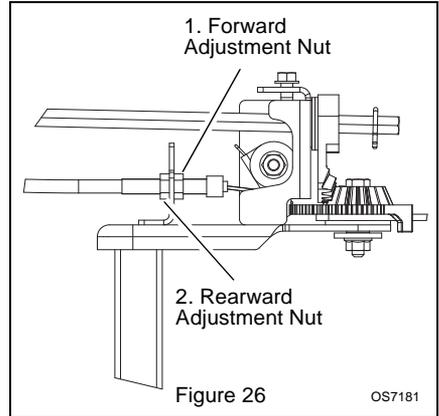


Figure 26

If chute does not rotate freely:

Tighten the cable by loosening the forward adjustment nut, and then tightening the rear adjustment nut against the bracket until all cable slack is removed (Figure 26).


## SPEED SELECTOR ADJUSTMENT

(Figure 27)

To adjust:

1. Disconnect adjustment pivot pin from speed selector lever by removing hair pin.
2. Place the speed selector on the dash in the fastest forward speed position.
3. Turn the speed selector lever straight down towards the ground as far as it will go.
4. Thread the adjustment pivot pin along the shift rod until it aligns with the mating hole on the speed selector lever. Insert the pivot pin into hole.
5. Secure adjustment pivot pin with hairpin.
6. Make sure the speed selector shifts into each speed position.
7. Check forward and reverse speeds:
  - a. Start unit.
  - b. Shift speed selector into the first forward speed.
  - c. Engage the traction clutch. Unit should move forward.
  - d. Stop unit.
  - e. Shift speed selector into first reverse speed.
  - f. Engage the traction clutch. Unit should move backward.
  - g. Shut off unit.

8. Adjust pivot pin on the shift rod as necessary so unit travels forward when speed selector is in first forward position and travels backward when speed selector is in first reverse position.
9. Connect the pivot pin to the speed selector arm with the hardware removed in step 1.

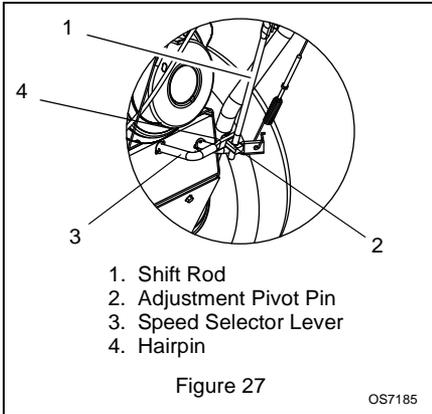

## ATTACHMENT CLUTCH/BRAKE ADJUSTMENT



**IMPORTANT: IMPROPER ADJUSTMENT** could result in unexpected movement of auger and impeller causing death or serious injury. Auger/Impeller must stop within 5 seconds when Attachment Clutch/Impeller Brake lever is released.


### Remove Attachment Cable Slack

(Figure 28 and 29)

1. Shut off engine, remove key, disconnect spark plug wire and allow unit to cool completely.
2. Loosen hardware securing belt cover to unit.

**NOTE:** DO NOT completely remove the hardware from unit.


3. Remove belt cover.
4. Loosen jam nut on cable adjustment barrel, and then turn the adjustment barrel up or down to lengthen or shorten cable and remove all cable slack (Figure 28).

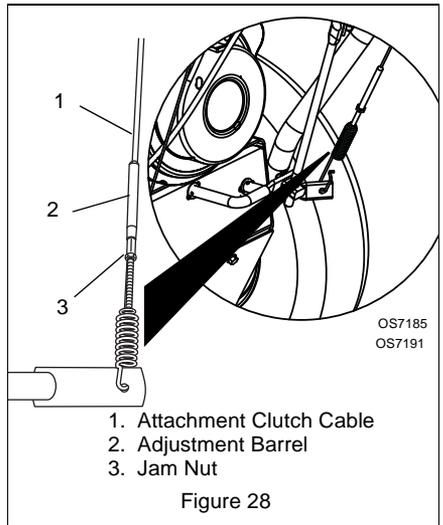

1. Attachment Clutch Cable
2. Adjustment Barrel
3. Jam Nut

5. With the attachment clutch disengaged, check that the attachment idler arm lightly touches the frame (Figure 29).
6. Tighten jam nut on the adjustment barrel.

With the attachment clutch disengaged, check the attachment idler arm position here. The attachment idler arm should lightly touch the frame.

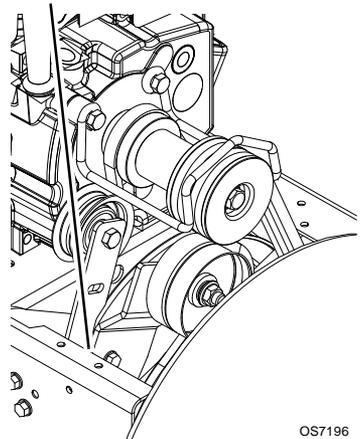


## Check Attachment Idler Arm Roller Clearance

(Figure 30)

**NOTE:** It will be difficult to check the measurement inside the frame. Use a 1/2 in. (12.7 mm) minimum spacer as a gauge to check the clearance between the roller and the frame.


1. Place the unit into the service position. Remove the bottom cover.
  2. With the clutch lever engaged, check the clearance between the frame and plastic roller on the lower end of the attachment idler arm (Figure 30).
- If roller is 1/2 in. (12.7 mm) or more from frame, go to *Adjust the Attachment Clutch Cable Spring Extension* on page 27.
  - If roller is less than 1/2 in. (12.7 mm) from frame, loosen idler adjustment nut and move idler closer to the belt. Tighten adjustment nut and recheck the roller clearance.

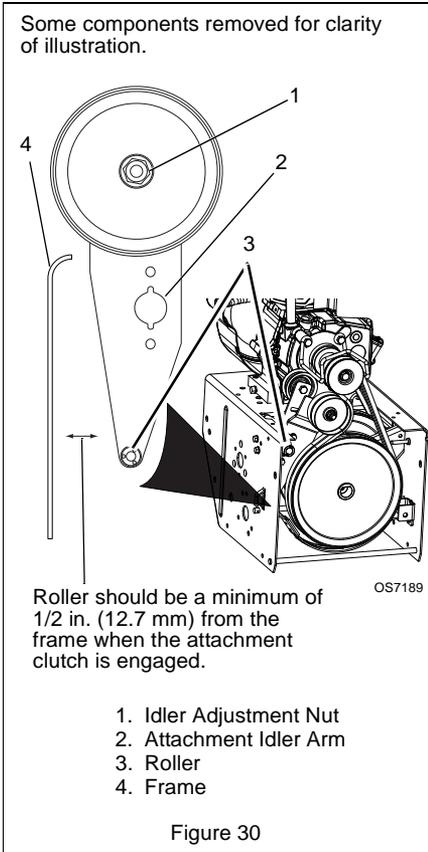


## Adjust the Attachment Clutch Cable Spring Extension

(Figure 31 and 32)

1. Check the attachment clutch cable spring extension. Measure the length of the attachment clutch cable spring with the clutch lever disengaged. Then measure the attachment clutch spring with the clutch lever engaged (Figure 31).
- If spring extension is within the specified range, go to *Check Attachment Brake* on page 28.
  - If spring extension is outside of specified range, go to step 2.

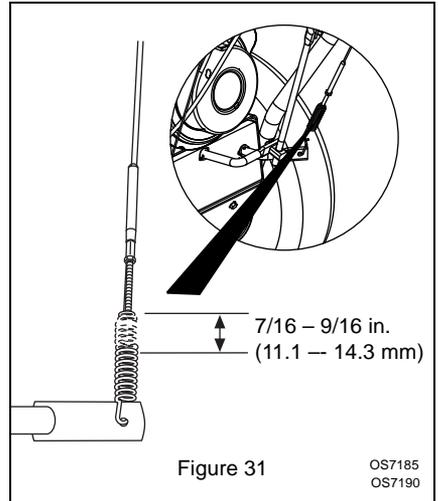


2. Adjust attachment idler position. (Figure 32)
- a. Loosen idler adjustment nut.
  - b. To increase spring extension, move idler closer to belts and tighten adjustment nut. Return to Step 1.
  - c. To decrease spring extension, move idler away from belts and tighten adjustment nut. Return to Step 1.

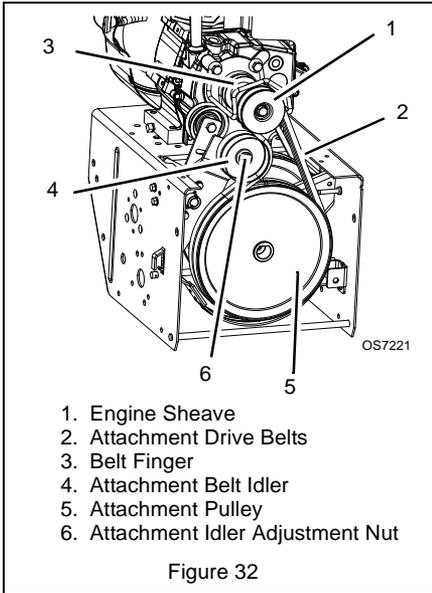

### Check Attachment Brake

(Figure 33)

1. With the clutch lever disengaged, brake pad must contact attachment belts. With clutch lever engaged, brake pad must be more than 1/16 in. (1.6 mm) from belts. If there is more than 1/16 in. (1.6 mm) gap, go to *Check Belt Finger Clearance* on page 28. If there is less than 1/16 in. (1.6 mm) gap, go to step 2.

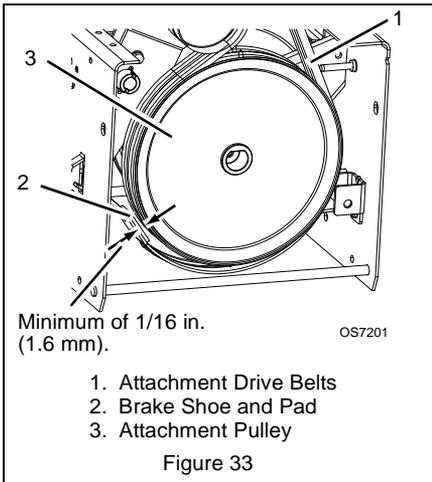

2. If there is less than 1/16 in. (1.6 mm) gap between brake pad and belts, follow these steps:

- a. To increase brake pad gap, loosen idler adjustment nut, and move idler away from belt. Position idler to achieve a 1/16 in. (1.6 mm) minimum brake pad gap and a 1/2 in. (12.7 mm) minimum gap between the plastic roller and the frame.
- b. Check the clutch cable spring extension and adjust as necessary to achieve a 7/16 – 9/16 in. (11.1 – 14.3 mm) spring extension.
- c. If the cable needed adjustment, recheck gaps described in step 2a. Repeat steps as necessary until brake clearance, roller gap and spring extension are within specified ranges.


**IMPORTANT:** If adjustments cannot be brought into specified ranges see your Dealer for repairs.

### Check Belt Finger Clearance

(Figure 34)

1. With clutch lever engaged, the belt finger located opposite the belt idler must be less than 1/8 in. (3 mm) from belts, but not touching the belts. To adjust belt finger, loosen the bolts and move the finger to the proper position. Tighten the bolts and recheck the belt finger clearance.
2. Replace the belt cover and tighten hardware.

Check belt finger clearance here. With the attachment clutch engaged, there should be less than 1/8 in. (3 mm) clearance between the belts and the belt finger. The belt finger should not touch the belts.

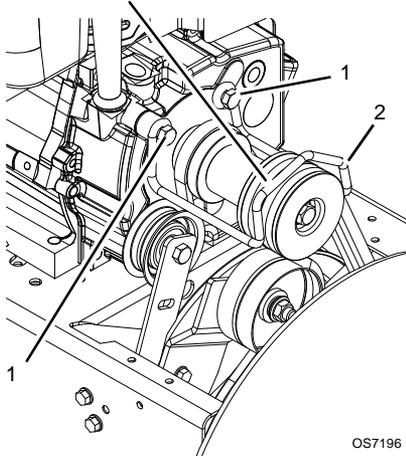

OS7196

1. Mounting Hardware
2. Belt Finger

Figure 34


## TRACTION DRIVE CLUTCH ADJUSTMENT

(Figure 35)

If drive slips, adjust traction clutch to compensate for friction disc wear.

To adjust traction clutch:

1. Place speed selector in fastest forward speed.
2. Place unit in service position.
3. Measure the length of the traction drive clutch spring at the top of the traction cable. See Figure 35.
4. Engage and hold the traction drive clutch lever and measure the spring again. The spring should be 1/2 – 11/16 in. (12.7 – 17.5 mm) longer when the lever is engaged.

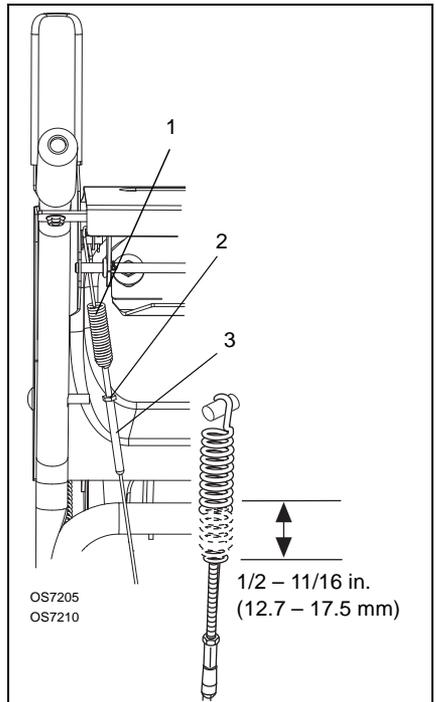

OS7205  
OS7210

1/2 – 11/16 in.  
(12.7 – 17.5 mm)

1. Traction Drive Clutch Spring
2. Jam Nut
3. Adjuster Body

Figure 35

5. Adjust spring extension.
  - a. With the traction drive clutch lever disengaged, loosen the jam nut on the cable adjuster.
  - b. Turn the adjuster body up the cable for more spring extension.
  - c. Turn the adjuster body down the cable for less spring extension.
  - d. Finger tighten the jam nut, and then hold the adjuster body with pliers and tighten the jam nut with wrench.
6. Measure the extension of the traction drive clutch spring.
7. Repeat step 5 until traction drive clutch spring lengthens 1/2 – 11/16 in. (12.7 – 17.5 mm) when the traction drive clutch lever is engaged.
8. With the clutch disengaged, check that there is more than 1/32 in. (0.8 mm) clearance between friction disc and drive plate assembly

**IMPORTANT:** If spring length cannot be adjusted within specified range, see your Dealer for repairs.

## ATTACHMENT DRIVE BELTS REPLACEMENT

(Figure 36)

### Remove old attachment drive belts:

1. Shut off engine, remove key, disconnect spark plug wire and allow unit to cool completely.
2. Loosen hardware securing belt cover to unit (Figure 37).

**NOTE:** Do NOT completely remove the hardware from unit.

3. Remove belt cover.
4. Remove chute gear cover.
5. Remove hair pin under the control panel connecting the discharge chute rod from the chute rotation lever and slide the discharge chute rod forward.

**IMPORTANT:** Disconnect chute lock cable and deflector cable.

6. Remove belt finger (Figure 34).

**IMPORTANT:** Use care when rotating the belt fingers. DO NOT bend belt fingers out of shape.

7. Remove attachment drive belts from engine sheave (it may be necessary to turn engine sheave using recoil starter handle).

**IMPORTANT:** To avoid bending bottom cover when tipping unit apart, support handlebars firmly or tip unit up on housing and remove bottom cover by removing six cap screws before separating unit.

8. Support Sno-Thro frame and housing.



**CAUTION:** Always support Sno-Thro frame and blower housing when loosening the cap screws holding them together. Never loosen cap screws while unit is in service position.

9. Remove hex bolts securing housing to frame (three on each side). Tip housing and frame apart on pivot pins (Figure 36).
10. Remove attachment drive belts from attachment pulley (hold brake away from belts).

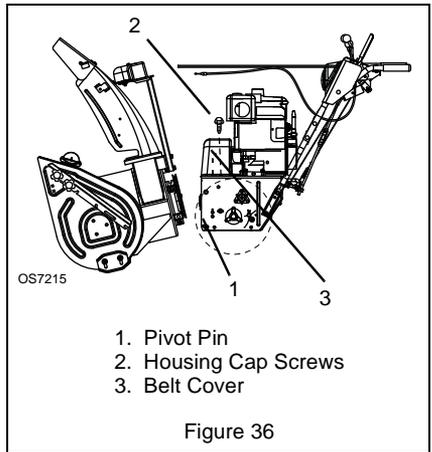


Figure 36

### Install new attachment drive belts:

1. Place new attachment belts onto attachment pulley (Figure 37).

**NOTE:** Holding down the attachment clutch lever will make it easier to reconnect the housing and frame.

2. Tip housing and frame back together and secure with hex bolts.
3. Place belts onto engine sheave.
4. Reposition and secure belt fingers.

**IMPORTANT:** With clutch lever engaged, belt finger on the side opposite the belt idler should be less than 1/8 in. (3 mm) from belts, but not touching the belts. Adjust belt finger as necessary.

5. Check adjustment. See *Check Belt Finger Clearance* on page 28.



**WARNING:** AUGER / IMPELLER MUST STOP within 5 seconds when attachment clutch lever is released or unit damage or serious injury may result.


6. Reconnect chute crank and secure with spring clip. Reconnect chute lock cable and deflector cable.
7. Replace chute gear cover.
8. Replace belt cover and tighten hardware.

## TRACTION DRIVE BELT REPLACEMENT

(Figure 37)

**NOTE:** Replacement will be easier with housing and frame tipped apart and bottom cover off.

1. Remove attachment drive belts (see *Attachment Drive Belts Replacement* on page 30).
2. To gain belt clearance, back out the stop bolt from the frame until the drive plate assembly can swing past it (Figure 38).

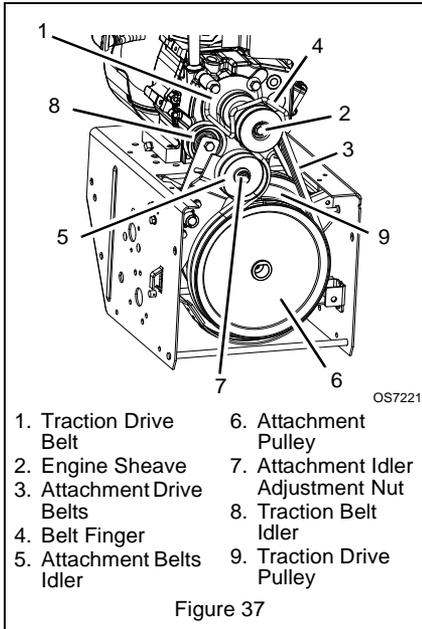

- |                           |                                    |
|---------------------------|------------------------------------|
| 1. Traction Drive Belt    | 6. Attachment Pulley               |
| 2. Engine Sheave          | 7. Attachment Idler Adjustment Nut |
| 3. Attachment Drive Belts | 8. Traction Belt Idler             |
| 4. Belt Finger            | 9. Traction Drive Pulley           |
| 5. Attachment Belts Idler |                                    |

Figure 37

3. Pull idler away from traction drive belt and remove belt from idler pulley, engine sheave and driven pulley (it may be necessary to turn engine pulley using recoil handle).
4. Install new traction drive belt onto attachment pulley and engine sheaves.
5. Pull the drive plate assembly toward the friction disc and tighten the stop bolt.


**NOTE:** Make sure the drive plate assembly return spring remains connected to the frame.

6. Replace attachment drive belts (*Attachment Drive Belts Replacement* on page 30).

## FRICTION DISC REPLACEMENT

(Figure 38)

1. Place unit into service position.
2. Remove bottom cover by removing six hex bolts.
3. With axle locked, hold one wheel so friction disc will not rotate and remove three cap screws holding friction disc to carrier.
4. Remove both wheels.
5. Remove right and left bearing flanges from frame.
6. Slide hex shaft to the left enough to remove pinion sprocket from hex shaft.
7. Slide hex shaft to the right enough to remove friction disc.
8. Slide new friction disc onto hex shaft.
9. Install pinion sprocket and chain on hex shaft, then replace bearing flanges.
10. Hold wheel so friction disc will not rotate and secure new friction disc to carrier with three hex screws removed in step 2.
11. Replace wheels.
12. Replace bottom cover.
13. Adjust traction drive clutch.

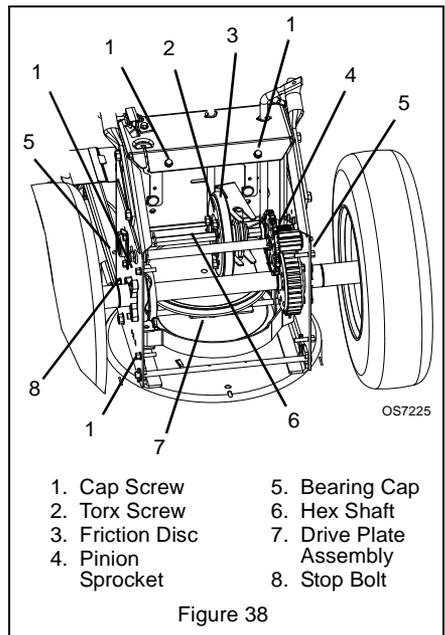

- |                    |                         |
|--------------------|-------------------------|
| 1. Cap Screw       | 5. Bearing Cap          |
| 2. Torx Screw      | 6. Hex Shaft            |
| 3. Friction Disc   | 7. Drive Plate Assembly |
| 4. Pinion Sprocket | 8. Stop Bolt            |

Figure 38

## BATTERY (926104, 105)

### Charging

1. Place unit on a level surface and shut off engine.
2. Disconnect negative (-) cable first, then positive (+) cable.
3. Loosen wing nut and remove battery. Place battery on bench or other well-ventilated place.
4. Connect positive (+) lead of charger to positive (+) terminal, and negative (-) lead to negative (-) terminal.
5. Charge the battery at two and a half amps for ten hours.
6. Reinstall battery into unit and connect positive (+) cable first, then negative (-) cable.


### Replacing

Use U1R or U1L; 240 CCA minimum @ 18°C type batteries.

## TRACK TENSION ADJUSTMENT (926041, 042, 043)

(Figure 39 and 40)


Check the track tension by applying pressure on the track midway between the upper and rear track rollers. Deflection should be approximately 3/8 in. (9.6 mm) (Figure 39). If deflection is excessive, tighten the track tension.

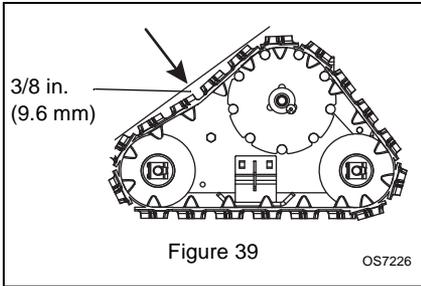

If unit pulls to the left or right when a straight path is desired adjust the track tension. If the unit is pulling to the left, tighten the left track adjuster. If the unit is pulling to the right, tighten the right track adjuster.

To adjust (Figure 40):


1. Tighten the adjuster nut to tighten the track tension.  
Loosen the adjuster nut to reduce track tension.
2. Check that unit tracks straight with no pulling to either side.

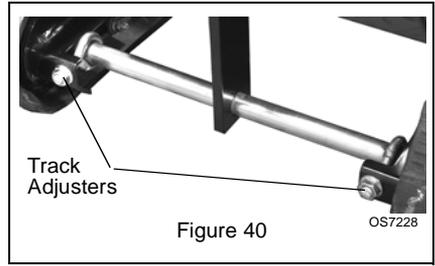

## HEIGHT ADJUSTER CABLE ADJUSTMENT (926041, 042, 043)

(Figure 41)

1. Make sure that height adjustment lock finger is fully engaged.
2. Loosen jam nut on cable adjustment barrel.
3. Turn the adjustment barrel to remove all cable slack and bring the overtravel arm until it makes slight contact with the right end of the slot in the height adjuster lock finger.
4. Tighten the jam nuts.

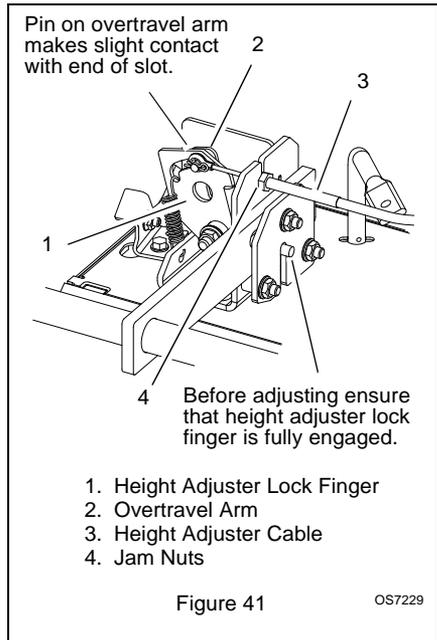

1. Height Adjuster Lock Finger
2. Overtravel Arm
3. Height Adjuster Cable
4. Jam Nuts

## STORAGE



**WARNING: AVOID INJURY.** Read and understand the entire *Safety* section before proceeding.

### SHORT TERM

**IMPORTANT:** NEVER spray unit with high pressure water or store unit outdoors.

Run with attachment clutch engaged a few minutes after each use to free unit of any loose or melting snow.

Close fuel shut-off valve.

Inspect unit for visible signs of wear, breakage or damage.

Keep all nuts, bolts and screws properly tightened and know unit is in safe working condition.

Store unit in a cool, dry protected area.

### LONG TERM

Clean unit thoroughly with mild soap and low pressure water and lubricate (see *MAINTENANCE* on page 20). Touch up all scratched painted surfaces.

Remove weight from wheels by putting blocks under frame or axle.

### Fuel System

Gasoline left in the fuel system for extended periods without a stabilizer will deteriorate, resulting in gum deposits in the system. These deposits can damage the carburetor and the fuel hoses, filter and tank. Prevent deposits from forming in the fuel system during storage by adding a quality fuel stabilizer to the fuel. Follow the recommended mix ratio found on the fuel stabilizer container.

To treat the fuel system for storage:

1. Add fuel stabilizer (Ariens p/n 00592900) according to manufacturers' instructions.
2. Run engine for at least 10 minutes after adding stabilizer to allow it to reach the carburetor.

NEVER store the engine with fuel in the fuel tank inside of a building with potential sources of ignition.

## SERVICE PARTS

Order the following parts through your Dealer:

Part No.	Description
00036800	Ariens Hi-Temp Grease (3, 3 oz cartridges )
00592900	Fuel Stabilizer (4 oz.)
21534100	Spark Plug
07200430	Impeller Belt
07200110	Traction Belt
00170800	Friction Disc
52100100	Shear Bolt Kit

## ACCESSORIES

See your authorized Ariens dealer to add the additional accessories available to your Sno-Thro.

Part No.	Description
72406500	Front Weight Kit
72406900	Slicer Bar
72600300	Composite Skid Shoes
72600200	Cover
72408000	Snow Cab
72600500	Track Drive Conversion Kit (926037, 038, 039, 040, 104, 105)
82600100	Brush Attachment Kit (926037, 038, 039, 040)

## TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	CORRECTION
<b>Engine will not crank/start.</b>	<ol style="list-style-type: none"> <li>1. Fuel tank is empty.</li> <li>2. Fuel shut-off valve closed.</li> <li>3. Build up of dirt and residue around governor/carburetor.</li> <li>4. Key Switch not in run position.</li> <li>5. Ignition switch starter circuit not functioning.</li> <li>6. Battery discharged, wires loose.</li> <li>7. Fuse on wiring harness blown.</li> <li>8. Electric starter not functioning.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill fuel tank.</li> <li>2. Open fuel shut-off valve.</li> <li>3. Clean area around governor/carburetor.</li> <li>4. Put Key Switch into run position.</li> <li>5. Check for a bad starter or connections.</li> <li>6. Check battery and connections.</li> <li>7. Replace fuse.</li> <li>8. Check for a bad starter or connections.</li> </ol>
<b>Engine stops.</b>	<ol style="list-style-type: none"> <li>1. Out of fuel.</li> <li>2. Fuel shut-off valve closed.</li> <li>3. Mechanical jam in blower rake or impeller.</li> <li>4. Polluted fuel supply.</li> <li>5. Faulty spark plug.</li> <li>6. Plugged fuel cap vent.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill fuel tank.</li> <li>2. Open fuel shut-off valve.</li> <li>3. Turn off engine, remove key, and wait for all moving parts to stop. Check for and remove obstruction and repair before restart.</li> <li>4. Replace with clean fuel.</li> <li>5. Replace or clean spark plug.</li> <li>6. Replace fuel cap.</li> </ol>
<b>Engine problems.</b>	<ol style="list-style-type: none"> <li>1. See Engine Manual.</li> </ol>	<ol style="list-style-type: none"> <li>1. See Engine Manual.</li> </ol>
<b>Does not operate in Forward / Reverse.</b>	<ol style="list-style-type: none"> <li>1. Friction disc not adjusted properly.</li> <li>2. Traction belt not functioning.</li> <li>3. Speed selector not adjusted properly.</li> </ol>	<ol style="list-style-type: none"> <li>1. Repair or replace friction disc. <i>See Friction Disc Replacement on page 31.</i></li> <li>2. Repair or replace traction drive belt. <i>See Traction Drive Belt Replacement on page 31.</i></li> <li>3. Adjust speed selector. <i>See Speed Selector Adjustment on page 25.</i></li> </ol>
<b>Small rubber beads collect in frame</b>	<ol style="list-style-type: none"> <li>1. Friction disc wear.</li> </ol>	<ol style="list-style-type: none"> <li>1. Normal friction disc wear. Chunks or large pieces of rubber mean friction disc should be checked and replaced as necessary.</li> </ol>
<b>Unit throws snow poorly or does not throw snow.</b>	<ol style="list-style-type: none"> <li>1. Shear bolts broken.</li> <li>2. Attachment clutch/brake not adjusted properly.</li> <li>3. Auger is frozen in place.</li> <li>4. Ice or debris is obstructing auger.</li> <li>5. Attachment drive belts slipping, worn or damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace shear bolts (<i>see Shear Bolts on page 24</i>).</li> <li>2. Adjust attachment clutch/brake (<i>see Attachment Clutch/Brake Adjustment on page 26</i>).</li> <li>3. Move unit to a warm place to thaw.</li> <li>4. With the engine off and auger disengaged, check for obstructions and remove.</li> <li>5. Adjust or replace attachment drive belts (<i>see Attachment Drive Belts Replacement on page 30</i>).</li> </ol>

# SPECIFICATIONS

Model Number	926037	926038	926039	926040
Description	Pro 26	Pro 28	Pro 32	Pro 36
<b>Engine</b>				
Engine Model	Briggs & Stratton Polar Force 1450	Briggs & Stratton Polar Force 1550	Briggs & Stratton Polar Force 1650	
Gross Torque* - ft-lbs (N-m)	14.5 (19.66)	15.5 (21.01)	16.5 (22.37)	
*Engine output stated in gross torque per SAE J1940 as rated by engine manufacturer				
Displacement - in. (cc)	18.61 (305)	20.87 (342)	20.87 (342)	20.87 (342)
High Idle - RPM (min)	3600 ± 100			
Electric Start	120V			
Fuel Tank Capacity - qt (Liters)	3.2 (3.0)			
<b>Chute</b>				
Chute Rotation Angle	200°			
Rotation Control	Quick Turn			
Deflector Control	Remote			
<b>Auger</b>				
Snow Clearing Width - in. (cm)	26 (66.0)	28 (71.2)	32 (81.3)	36 (91.4)
Gearcase	Cast Iron			
Auger Diameter - in. (cm)	16 (40.6)			
<b>Impeller</b>				
Impeller Diameter - in. (cm)	14 (35.6)			
Impeller Speed - RPM	1112			
Impeller Tip Speed - ft/sec (m/s)	4076 (1242)			
<b>Drive</b>				
Blower Drive	Dual HA Belts			
Drive	Disc-O-Matic™			
Speeds	6 Forward and 2 Reverse			
Axle Control	Automatic Traction Control			
Pneumatic Tires - in. (cm)	16 x 4.8 (41 x 12)		16 x 6.5 (41 x 17)	
<b>Size and Weight</b>				
Length - in. (cm)	61.5 (156)			
Height - in. (cm)	45 (114.3)			
Width - in. (cm)	28.5 (72.4)	30.5 (77.5)	34.5 (87.6)	38.5 (97.8)
Weight - lbs (Kg)	282 (127.9)	293 (132.9)	335 (151.9)	356 (161.5)

## SPECIFICATIONS

Model Number	926041	926042	926043
Description	Pro-Track 26	Pro-Track 28	Pro-Track 32
<b>Engine</b>			
Engine Model	Briggs & Stratton Polar Force 1450	Briggs & Stratton Polar Force 1550	Briggs & Stratton Polar Force 1650
Gross Torque* - ft-lbs (N-m)	14.5 (19.66)	15.5 (21.01)	16.5 (22.37)
*Engine output stated in gross torque per SAE J1940 as rated by engine manufacturer			
Displacement - in. (cc)	18.61 (305)	20.87 (342)	20.87 (342)
High Idle - RPM (min)	3600 ± 100		
Electric Start	120V		
Fuel Tank Capacity - qt (Liters)	3.2 (3.0)		
<b>Chute</b>			
Chute Rotation Angle	200°		
Rotation Control	Quick Turn		
Deflector Control	Remote		
<b>Auger</b>			
Snow Clearing Width - in. (cm)	26 (66)	28 (71.2)	32 (81.3)
Gearcase	Cast Iron		
Auger Diameter - in. (cm)	16 (40.6)		
<b>Impeller</b>			
Impeller Diameter - in. (cm)	14 (35.6)		
Impeller Speed (RPM)	1112		
Impeller Tip Speed - ft/sec (m/s)	4076 (1242)		
<b>Drive</b>			
Blower Drive	Dual HA Belts		
Drive	Disc-O-Matic™		
Speeds	6 Forward and 2 Reverse		
Axle Control	Traction Control with Axle Mounted Lockout		
Pneumatic Tires - in. (cm)	5.5 (13.97) Track		
<b>Size and Weight</b>			
Length - in. (cm)	61.5 (156)		
Height - in. (cm)	45 (114.3)		
Width - in. (cm)	28.5 (72.4)	30.5 (77.5)	34.5 (87.6)
Weight - lbs (Kg)	332 (150.6)	343 (155.6)	385 (174.6)

## SPECIFICATIONS

<b>Model Number</b>	926104	926105
<b>Description</b>	Pro 32	Pro 36
<b>Engine</b>		
Engine Model	Briggs & Stratton 1650 Series	
Gross Torque* - ft-lbs (N-m)	16.5 (22.37)	
*Engine output stated in gross torque per SAE J1940 as rated by engine manufacturer		
Displacement - in. (cc)	20.87 (342)	
High Idle - RPM (min)	3600 ± 100	
Electric Start	12 V	
Fuel Tank Capacity - qt (Liters)	3.2 (3.0)	
<b>Chute</b>		
Chute Rotation Angle	200°	
Rotation Control	Quick Turn	
Deflector Control	Remote	
<b>Auger</b>		
Snow Clearing Width - in. (cm)	32 (81.3)	36 (91.4)
Gearcase	Cast Iron	
Auger Diameter - in. (cm)	16 (40.6)	
<b>Impeller</b>		
Impeller Diameter - in. (cm)	14 (35.6)	
Impeller Speed (RPM)	1112	
Impeller Tip Speed - ft/sec (m/s)	4076 (1242)	
<b>Drive</b>		
Blower Drive	Dual HA Belts	
Drive	Disc-O-Matic™	
Speeds	6 Forward and 2 Reverse	
Axle Control	Automatic Traction Control	
Pneumatic Tires - in. (cm)	16 x 6.5 (41 x 17)	
<b>Size and Weight</b>		
Length - in. (cm)	61.5 (156)	
Height - in. (cm)	45 (114.3)	
Width - in. (cm)	34.5 (87.6)	38.5 (97.8)
Weight - lbs (Kg)	335 (151.9)	356 (161.5)



## Three-Year Limited Sno-Thro® Warranty

Ariens Company (Ariens) warrants to the **original purchaser** that Ariens Sno-Thro products will be free from defects in material and workmanship for a period of three years after the date of purchase. An authorized Ariens dealer will repair any defect in material or workmanship, and repair or replace any defective part, subject to the conditions, limitations and exclusions set forth herein. Such repair or replacement will be free of charge to the original purchaser (labor and parts), except as noted below.

The duration of this warranty applies only if the product is put to personal use around a household or residence. If the product is put to any business use, agricultural, commercial, or industrial, then the duration of this warranty shall be 90 days after the date of purchase, or one year after the date of purchase if the product is labeled as a Pro, Professional, or Commercial Product. If any product is rented or leased, then the duration of this warranty shall be 90 days after the date of purchase. It is the owner's responsibility to perform correctly the maintenance and minor adjustments explained in the owner's manual.

### **Two-Year Limited Warranty on AMP™ Series Battery Packs and Subassemblies**

The battery pack and/or battery subassemblies on AMP series electric Sno-Thro products is/are warranted to the **original purchaser** for two years from the date of purchase. Ariens will replace, free of charge to the original purchaser, any battery pack and/or battery subassembly that fails due to defect in material or workmanship for one year after the date of purchase. For the next 12 months, Ariens will cover the prorated cost of replacing a battery pack and/or battery subassembly that fails due to defect in material or workmanship. This warranty does not apply to battery packs or battery subassemblies that fail due to accident, neglect, abuse, improper maintenance, improper storage or improper charging procedures.

### **Service Parts and Accessories Warranty**

Genuine Ariens or Gravely brand service parts and accessories are warranted to be free from defects in material and workmanship for a period of 90 days after the date of purchase. An authorized Ariens dealer will repair or replace any such part or accessory free of charge, except for labor, during that period.

## Exceptions, Limitations, Exclusions

### **Customer Responsibilities**

**Register the product immediately at the time of sale.** If the dealer does not register the product, the customer must complete the product registration card in the literature package and return it to the Ariens Company, or register the unit online at [www.ariens.com](http://www.ariens.com) or [www.gravely.com](http://www.gravely.com).

To obtain warranty service, the **original purchaser** must:

- Perform the maintenance and minor adjustments explained in the owner's manual.
- Promptly notify Ariens or an authorized Ariens or Gravely service representative of the need for warranty service.
- Transport the product to and from the place of warranty service.
- Have the warranty service performed by an authorized Ariens or Gravely service representative.

To find an Ariens or Gravely authorized service representative, contact Ariens at:

655 W. Ryan Street  
Brillion, WI 54110  
(920) 756 - 2141  
[www.ariens.com](http://www.ariens.com)  
[www.gravely.com](http://www.gravely.com)

## **Limitations**

- Batteries are warranted only for a period of 12 months after date of purchase, on a prorated basis. For the first 90 days of the warranty period, a defective battery will be replaced free of charge. If the applicable warranty period is more than 90 days, Ariens will cover the prorated cost of any defective battery, for up to 12 months after the date of purchase. This battery limited warranty does not apply to the battery packs on AMP series products.
- Friction discs, belts, idlers, cables, and electrical components on Sno-Thro models put to personal use around a household or residence are warranted against defects in materials or workmanship to the **original purchaser** for two years.

## **Exclusions – Items Not Covered by This Warranty**

- Engines and engine accessories are covered only by the engine manufacturer's warranty and are not covered by this warranty.
- Parts that are not genuine Ariens or Gravely service parts are not covered by this warranty and may void the warranty.
- Damages resulting from the installation or use of any part, accessory or attachment which is not approved by the Ariens Company for use with product(s) identified herein are not covered by this warranty.
- The following maintenance, service and replacement items are not covered by this warranty unless they are noted in the Limitations section above: lubricants, spark plugs, oil, oil filters, air filters, brake shoes, runners, scraper blades, shear bolts, headlights, light bulbs.
- Any misuse, alteration, improper assembly, improper adjustment, neglect, or accident which requires repair is not covered by this warranty.
- This warranty applies only to products purchased in the United States (including Puerto Rico) and Canada. In all other countries, contact place of purchase for warranty information.

## **Disclaimer**

Ariens may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating Ariens to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

## **LIMITATION OF REMEDY AND DAMAGES**

Ariens Company's liability under this warranty, and under any implied warranty that may exist, is limited to repair of any defect in workmanship, and repair or replacement of any defective part. Ariens shall not be liable for incidental, special, or consequential damages (including lost profits). Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## **DISCLAIMER OF FURTHER WARRANTY**

**Ariens Company makes no warranty, express or implied, other than what is expressly made in this warranty. If the law of your state provides that an implied warranty of merchantability, or an implied warranty of fitness for particular purpose, or any other implied warranty, applies to Ariens Company, then any such implied warranty is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.**

*This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*



THE KING OF SNOW®

Ariens Company  
655 West Ryan Street  
Brillion, WI 54110-1072  
920-756-2141  
www.ariens.com

*See your local dealer for these useful accessories:*



*Sno-Thro® Cover*  
*Protect your investment. Available*  
*in two sizes.*

*Drift Cutter Kit*  
*Helps your Sno-Thro® tackle*  
*drifting and packed snow.*



*Protective Floor Mat*  
*Protects floor from rust, dirt and*  
*snow melt.*

*Non-abrasive Skid Shoes*  
*Protect decorative surfaces from*  
*scratching and marring.*



*Please see your local dealer for accessory fit up and installation.*  
*Visit [www.ariens.com](http://www.ariens.com) for more information on all of our great accessories.*



**WARNING**



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.